



Computer Desk


Installation Option I

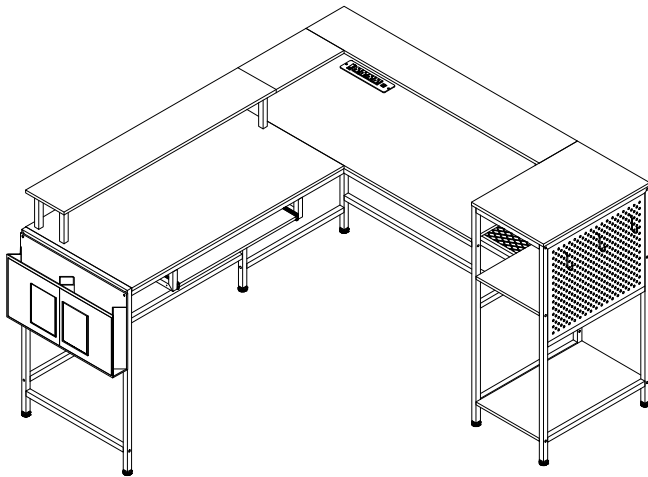


Installation Option II

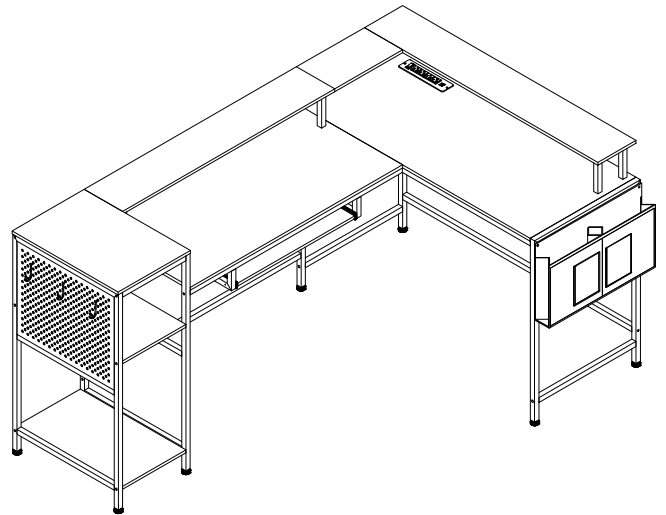

Installation Option III


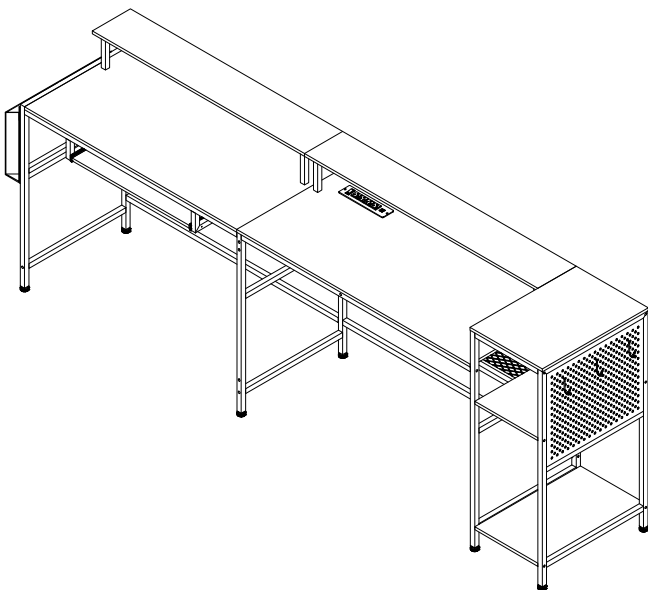


Installation Option IV

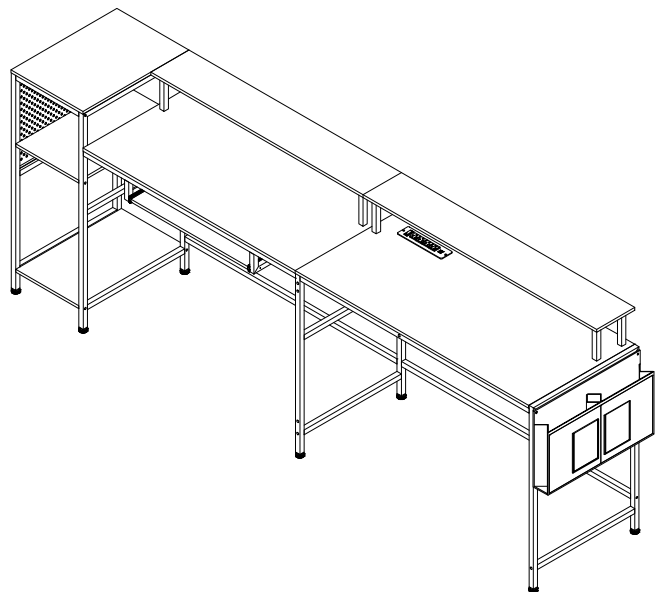






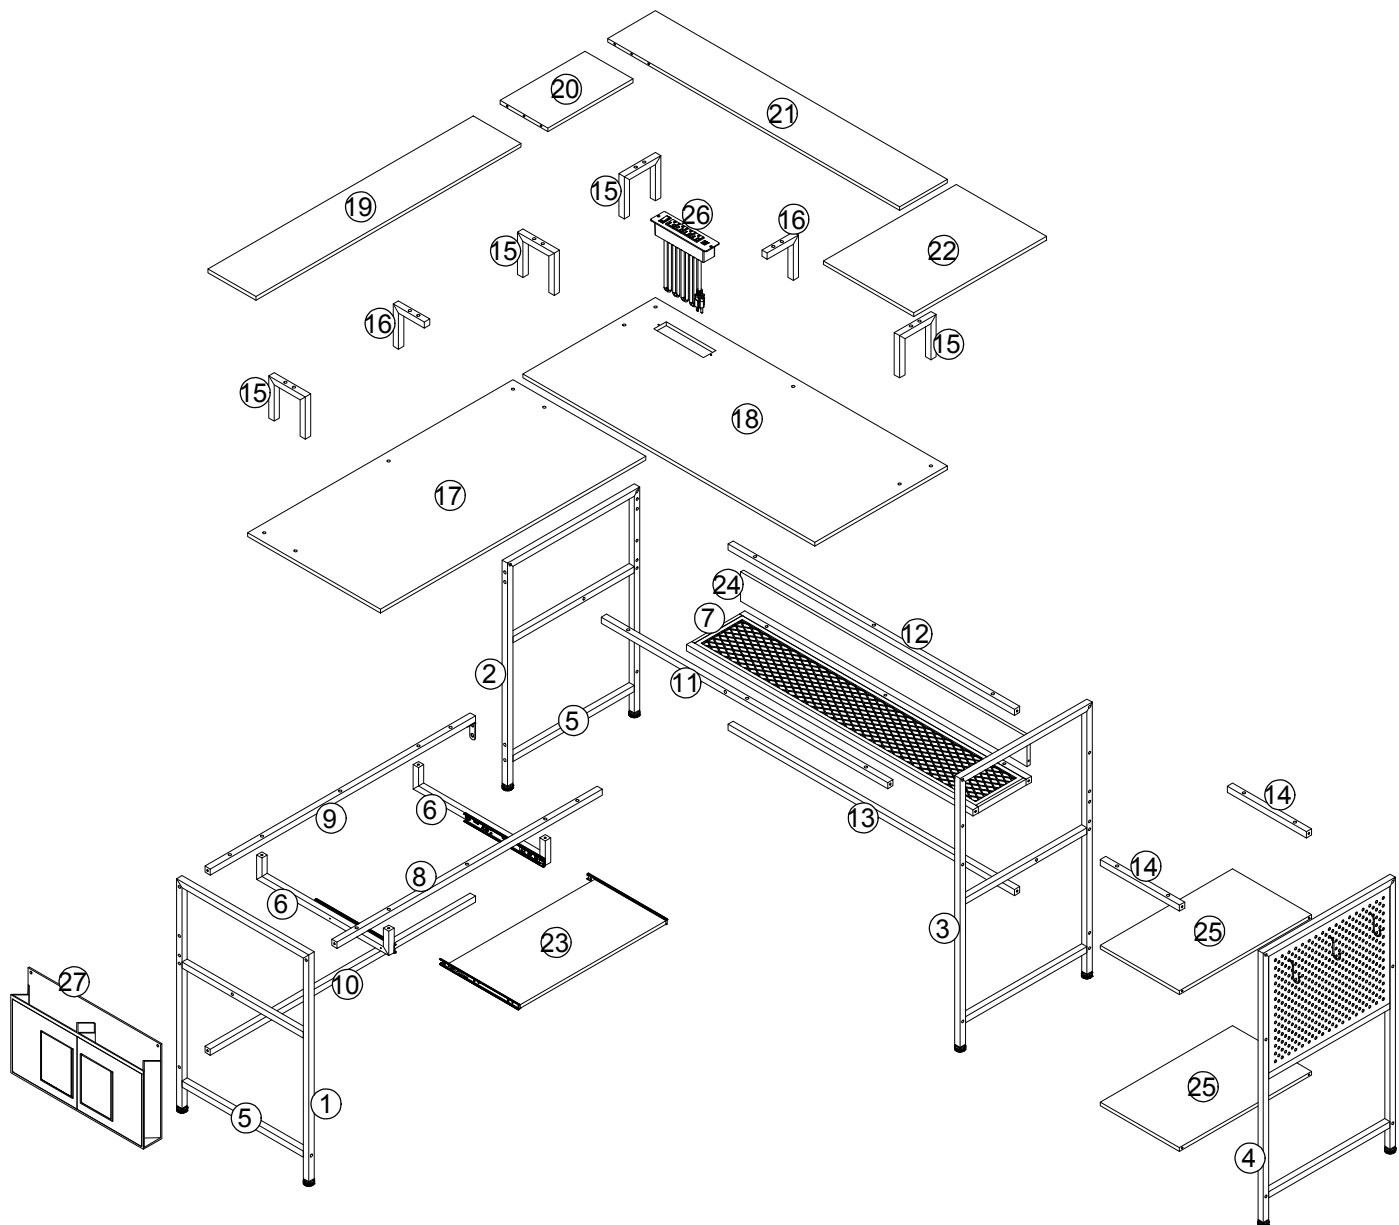





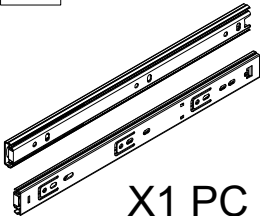




Version :1.0

ASSEMBLY INSTRUCTION



















If you have any questions, please contact us
Service Email: sedetahelp@gmail.com

ASSEMBLY INSTRUCTION


A M6*40mm  X27+1	B M6*30mm  X12+1	C M6*25mm  X28+1	D ST7*40mm  X15+1
E ST3.5*12mm  X6+2	F ST4*10mm  X4	G S  X3	H Ø6*35  X6+1
I M6*12MM  X2	J M6*55  X2	K M8  X8	L 12"  X1 PC
M  X6	 X1	 X1	 X1

ASSEMBLY INSTRUCTION
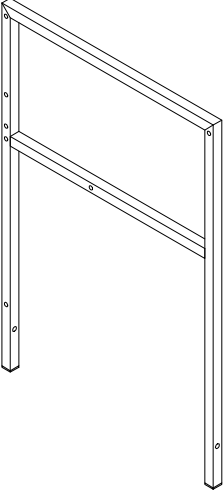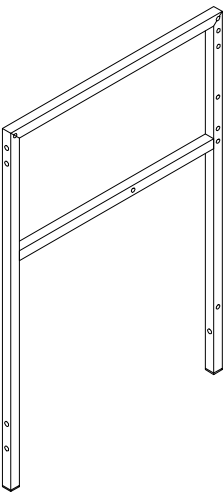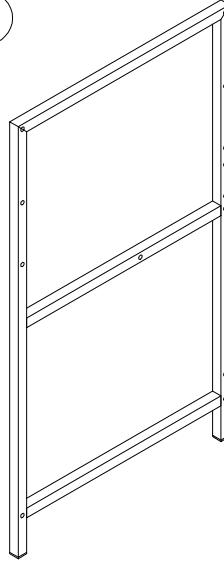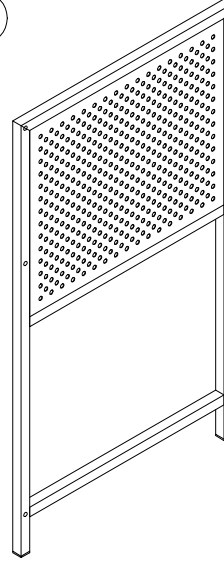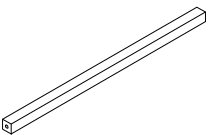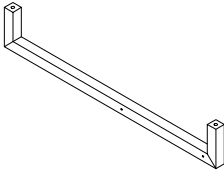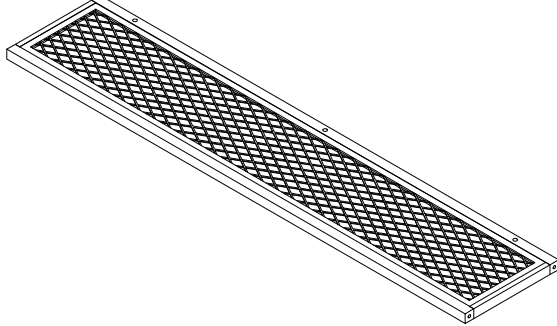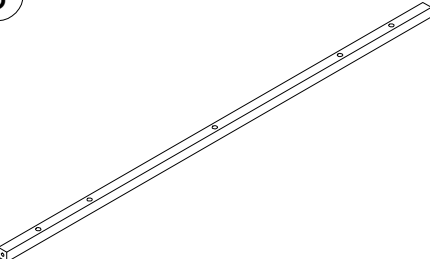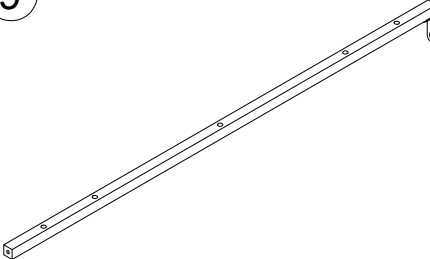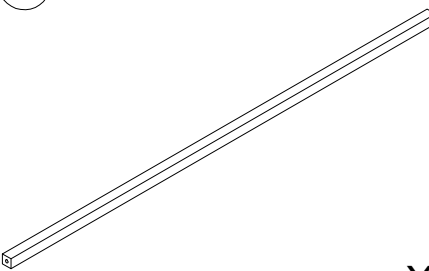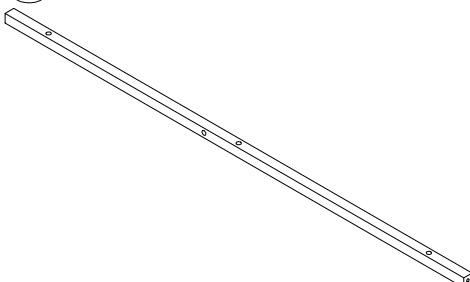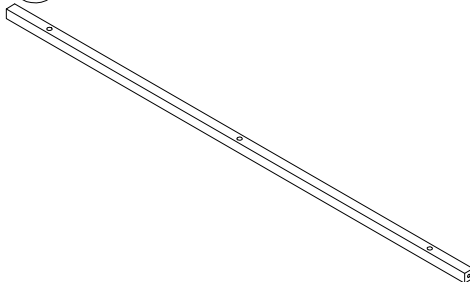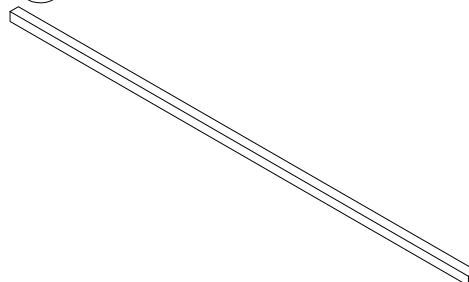
<div>1</div> <div></div> <div>X1</div>	<div>2</div> <div></div> <div>X1</div>	<div>3</div> <div></div> <div>X1</div>	<div>4</div> <div></div> <div>X1</div>
<div>5</div> <div></div> <div>X2</div>	<div>6</div> <div></div> <div>X2</div>	<div>7</div> <div></div> <div>X1</div>	
<div>8</div> <div></div> <div>X1</div>	<div>9</div> <div></div> <div>X1</div>	<div>10</div> <div></div> <div>X1</div>	
<div>11</div> <div></div> <div>X1</div>	<div>12</div> <div></div> <div>X1</div>	<div>13</div> <div></div> <div>X1</div>	
<div>14</div> <div></div> <div>X2</div>	<div>15</div> <div></div> <div>X4</div>	<div>16</div> <div></div> <div>X2</div>	


ASSEMBLY INSTRUCTION

17

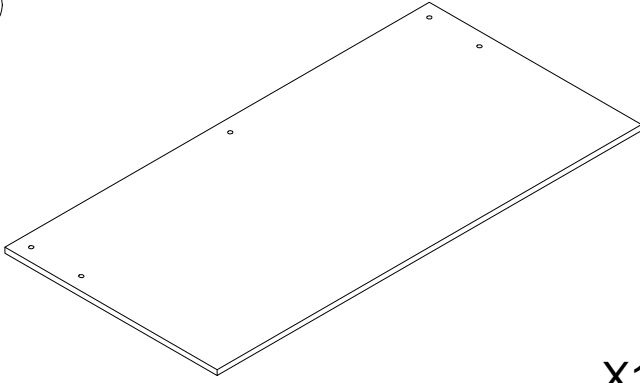


X1

18

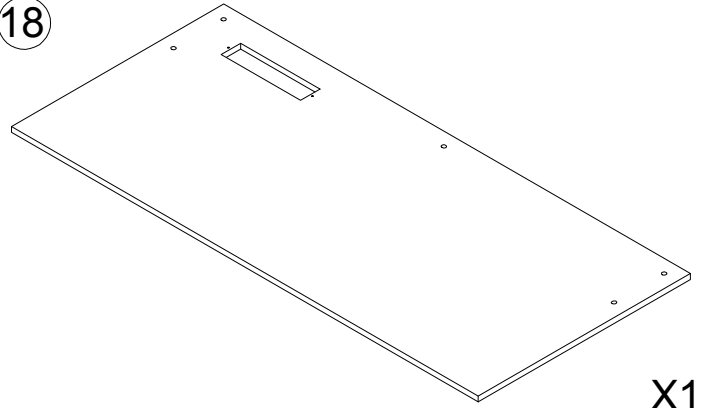


X1

19

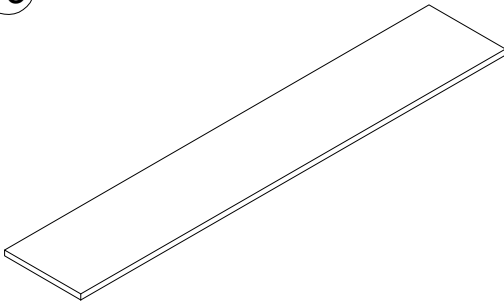


X1

20

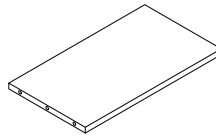


X1

21

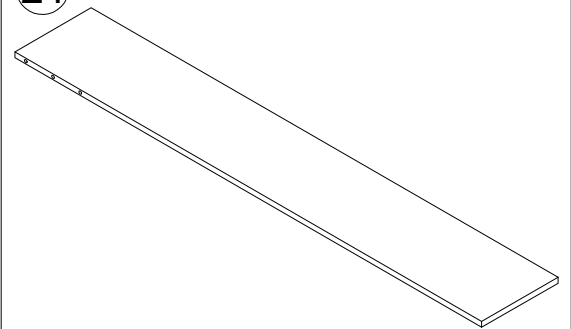


X1

22

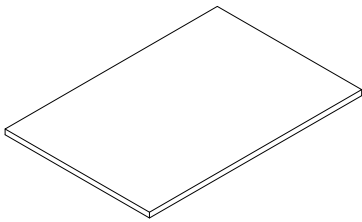


X1

23

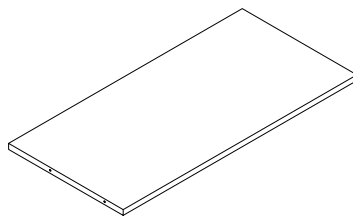


X1

24

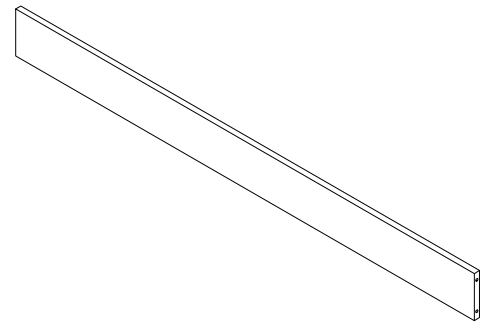


X1

25

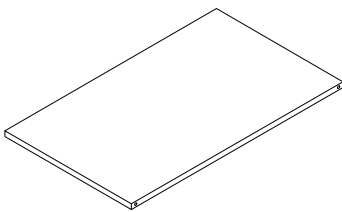


X2

26




X1

27

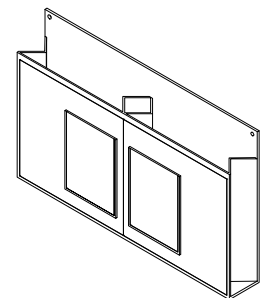

X1


28

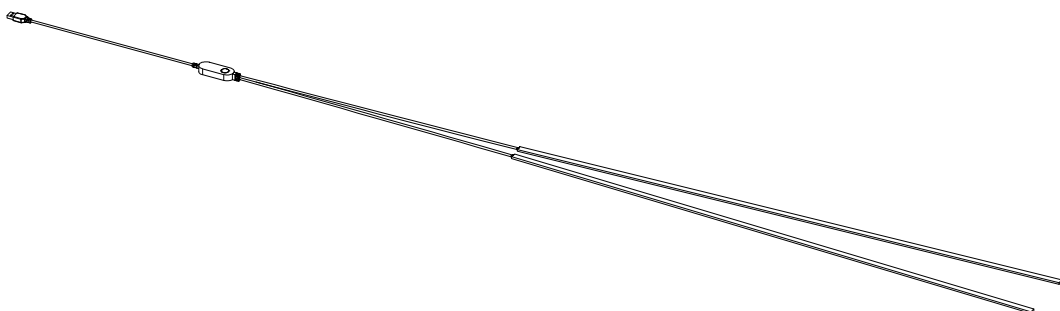


X1

ASSEMBLY INSTRUCTION


1.Matters needing attention

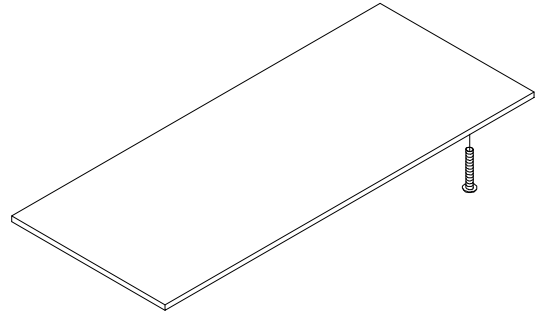

Be sure to use the proper screws to avoid damaging the parts


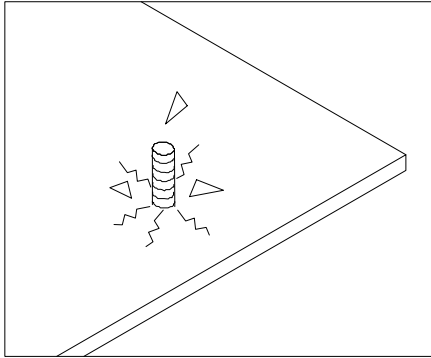


Wrong screws can cause the plank to crack

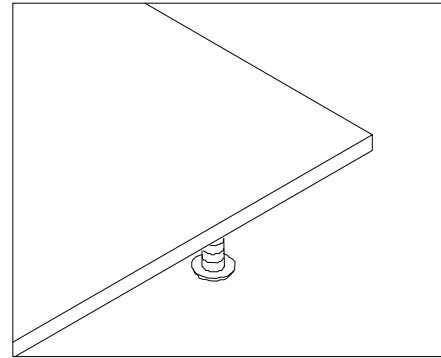

The right screw is the right size

2.Matters needing attention



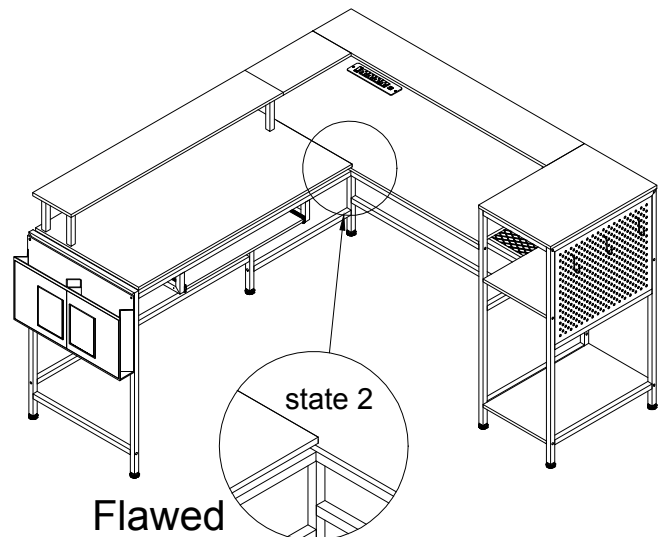
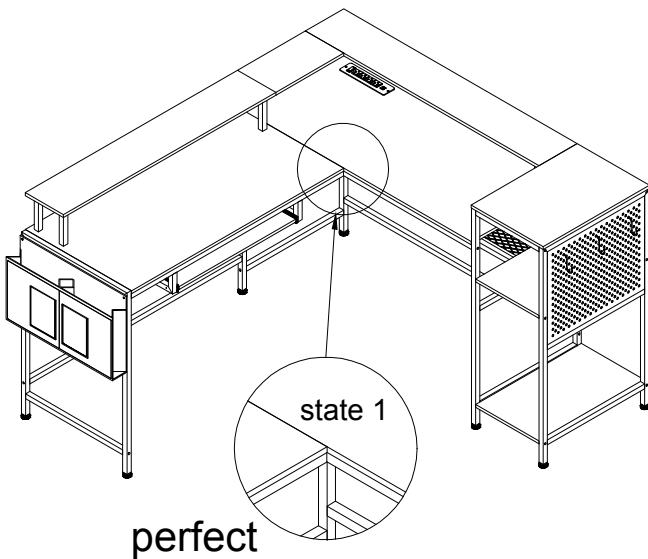


If you encounter "state 2" during the installation process, please loosen the corresponding screws of each part in time, adjust slowly, and then slowly tighten all the screws after the adjustment is completed.


ASSEMBLY INSTRUCTION

Matters needing attention

- (1) When installing the screws in the installation step, the screws do not need to be tightened.
After this installation step is confirmed and the holes are aligned, then tighten all the screws.
- (2) If the screws are tightened during the installation process, it will cause problems such as misalignment of the screw holes and misalignment of the board in subsequent installations.

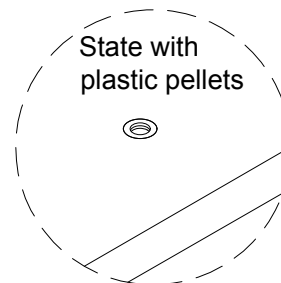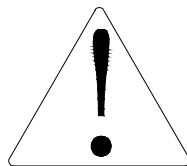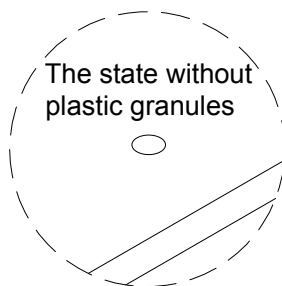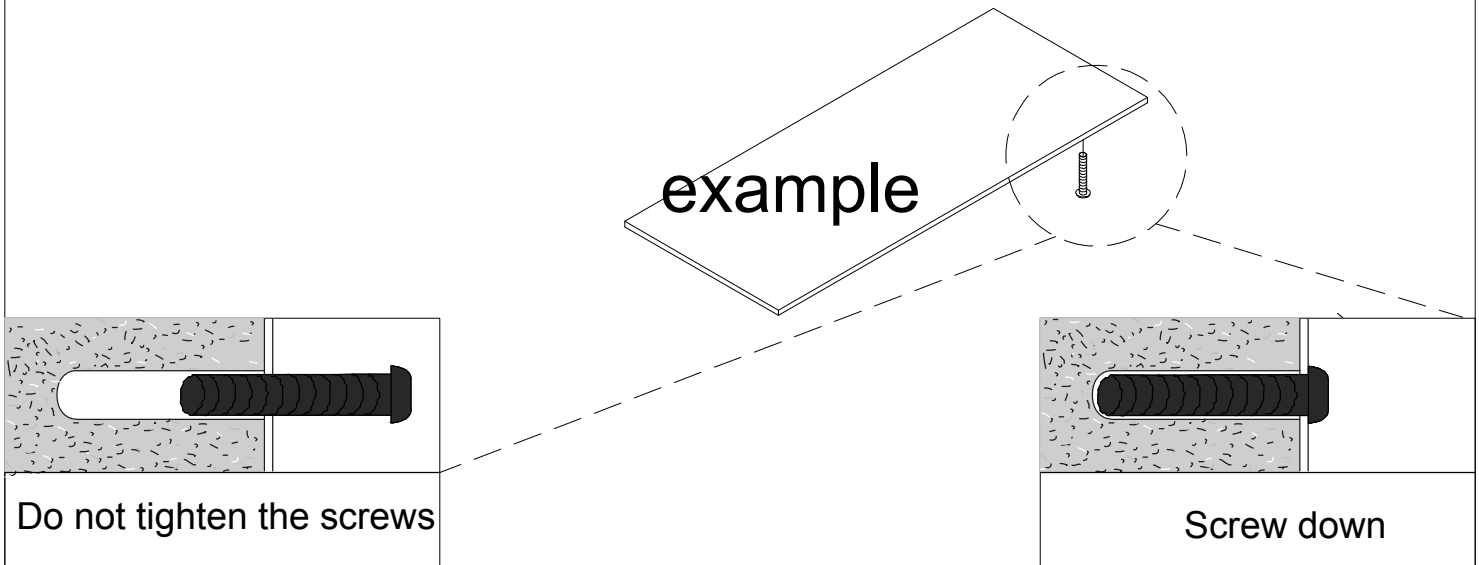

Note that if you find that there are no plastic granules on the wooden block, the table cannot be assembled, please don't worry, please use the spare plastic granules in the screw bag

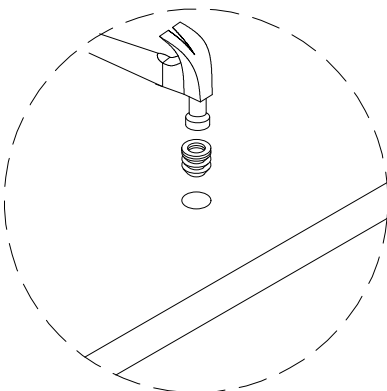


Note, please use a tool to carefully align the plastic pellets with the holes and then knock them down


ASSEMBLY INSTRUCTION

There are 4 ways to install this table, each with different steps.
Please choose one type and follow its unique assembly method.


Type 1:
Please refer to Step 6 ~ Step 17.

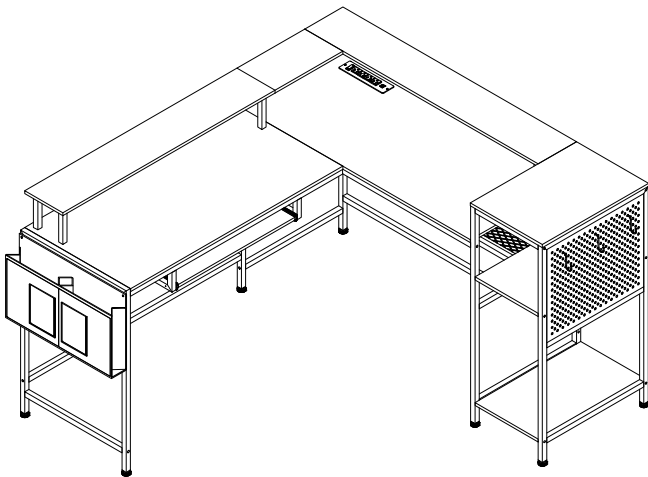


Type 2:
Please refer to Step 18 ~ Step 29.

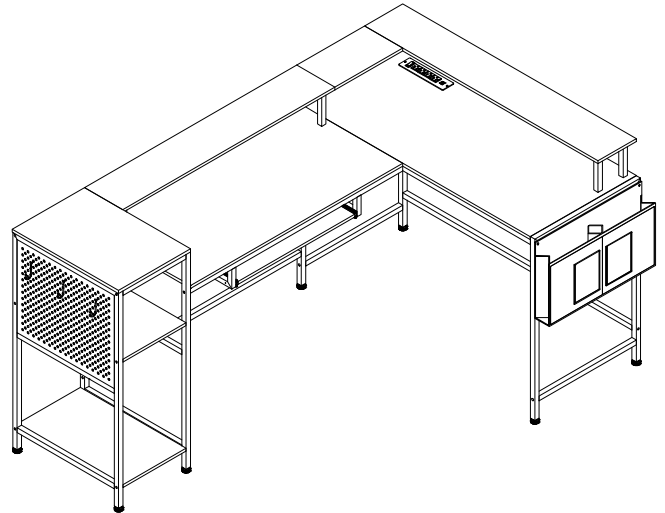

Type 3:
Please refer to Step 30 ~ Step 42.


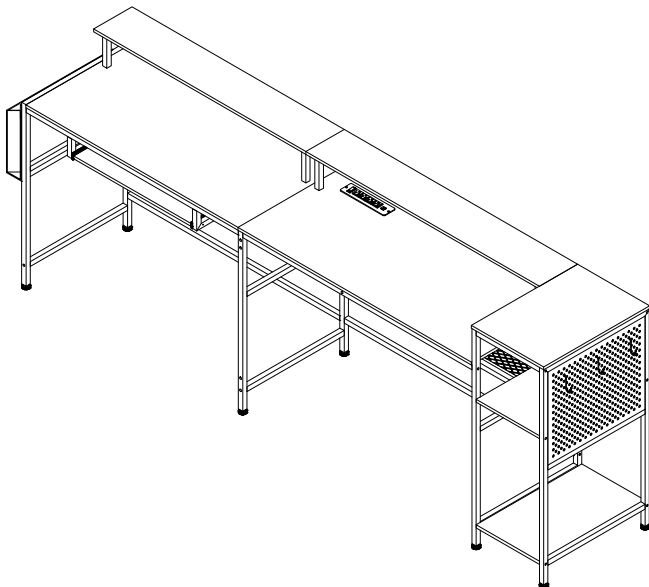


Type 4:
Please refer to Step 43 ~ Step 55.


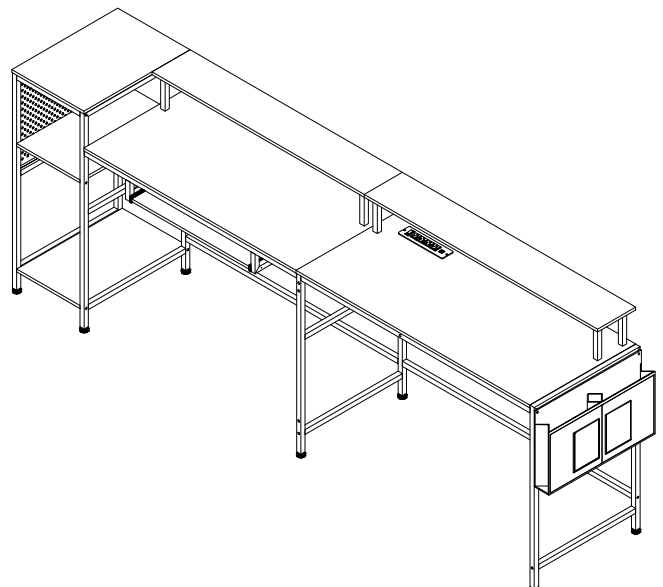


ASSEMBLY INSTRUCTION

STEP 1

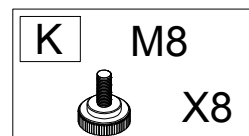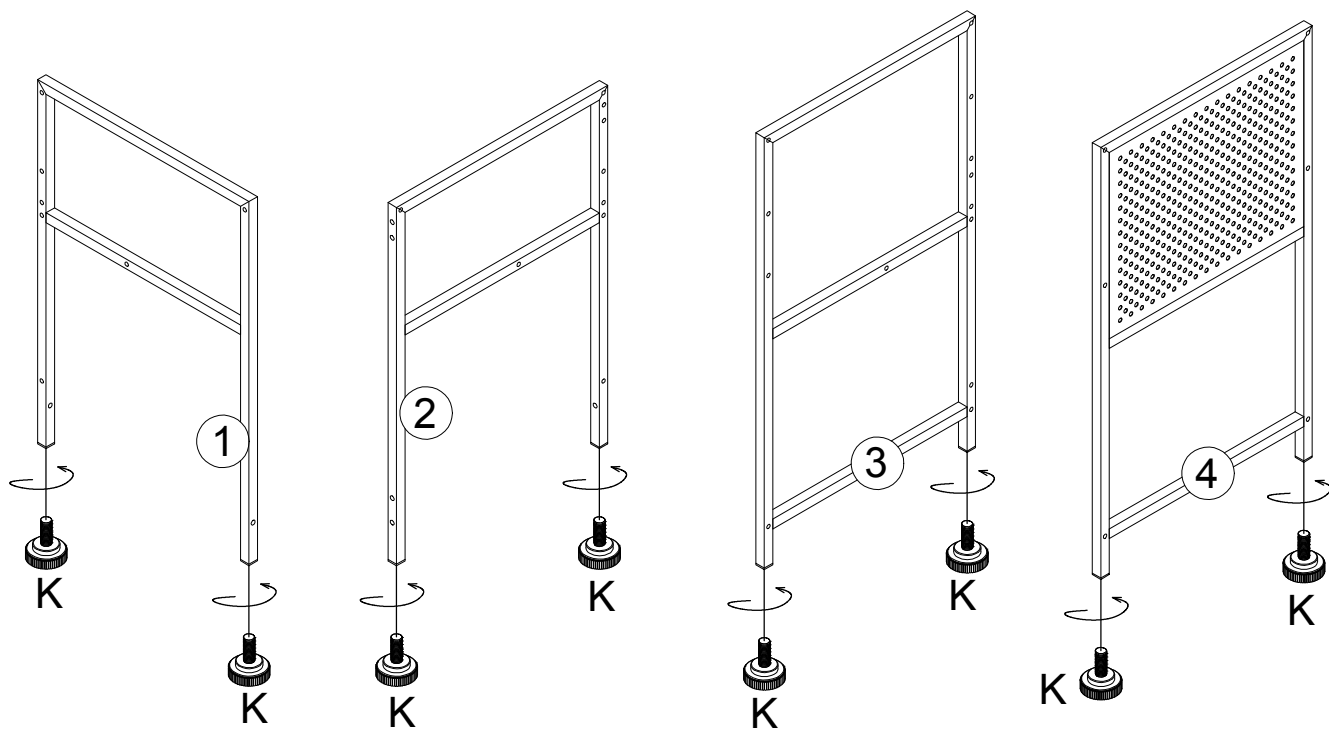


STEP 2

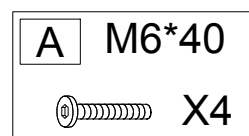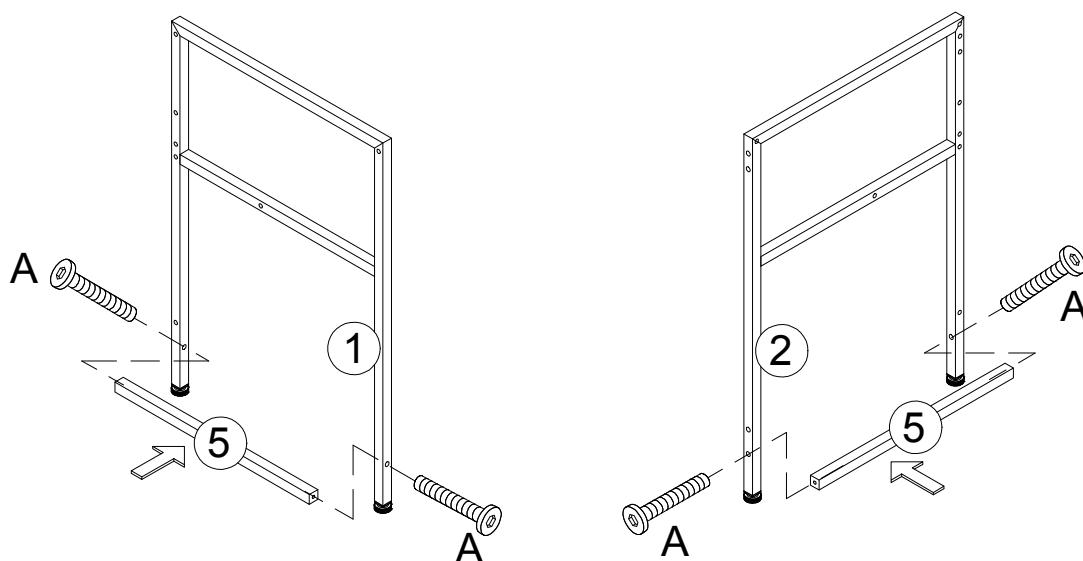

ASSEMBLY INSTRUCTION


STEP 3

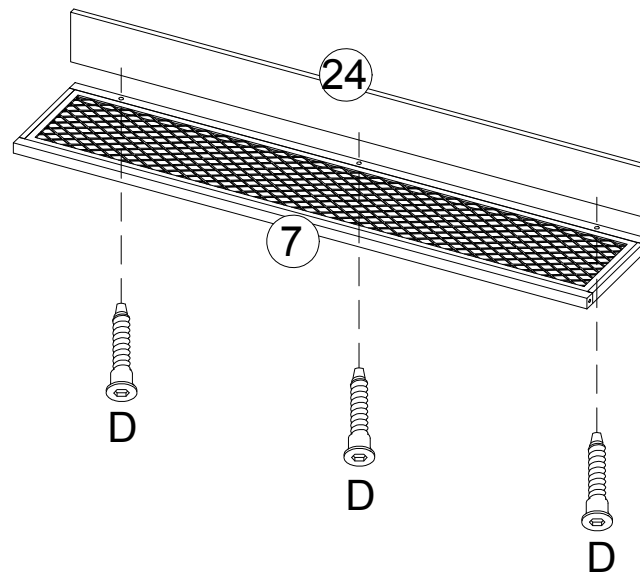





D ST7*40mm

X3

STEP 4

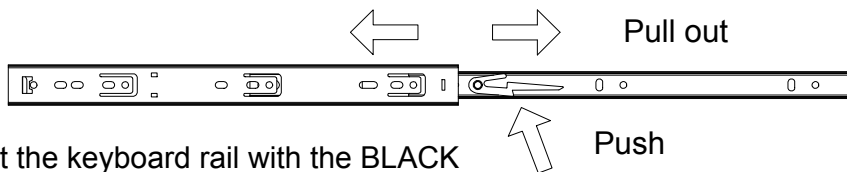

Disconnect the keyboard rail with the BLACK PLASTIC PART. It needs to be pulled down to disconnect the runners.

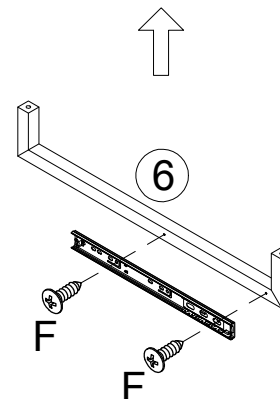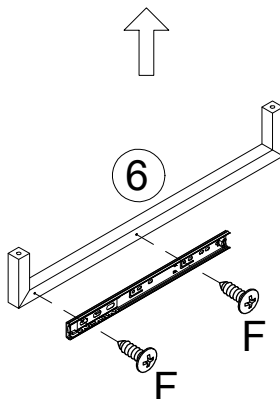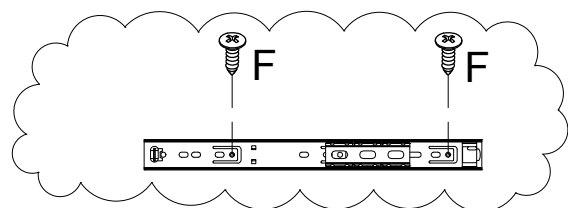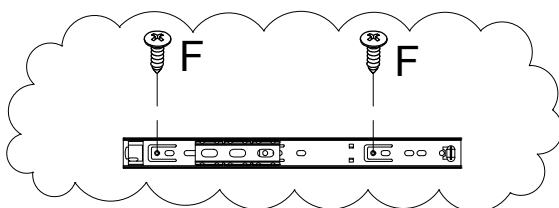


F ST4*10

X4

ASSEMBLY INSTRUCTION


STEP 5

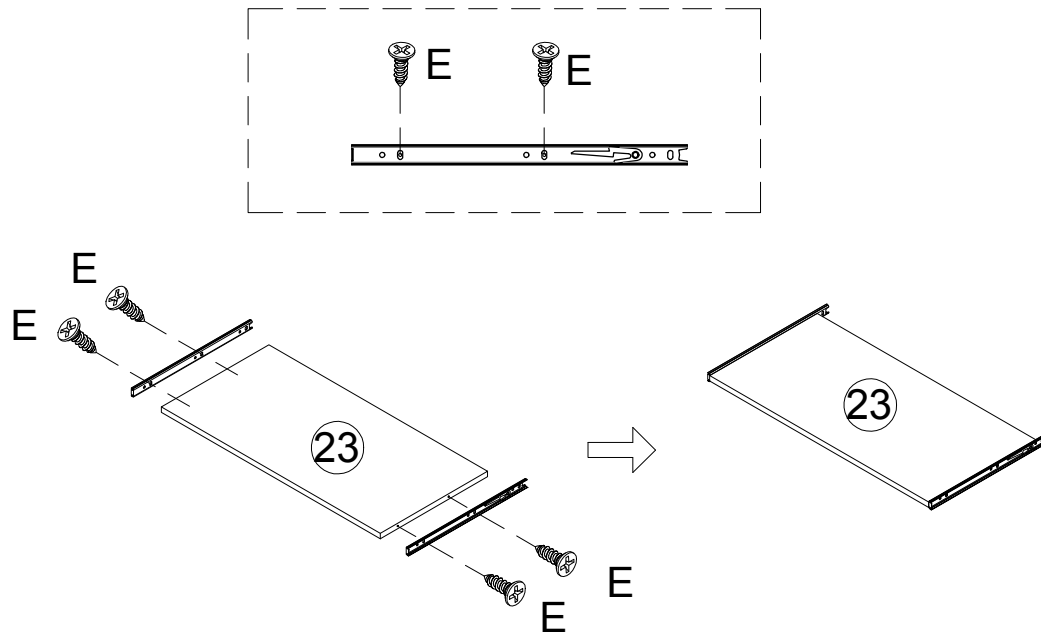

E ST3.5*12

X4

STEP 6

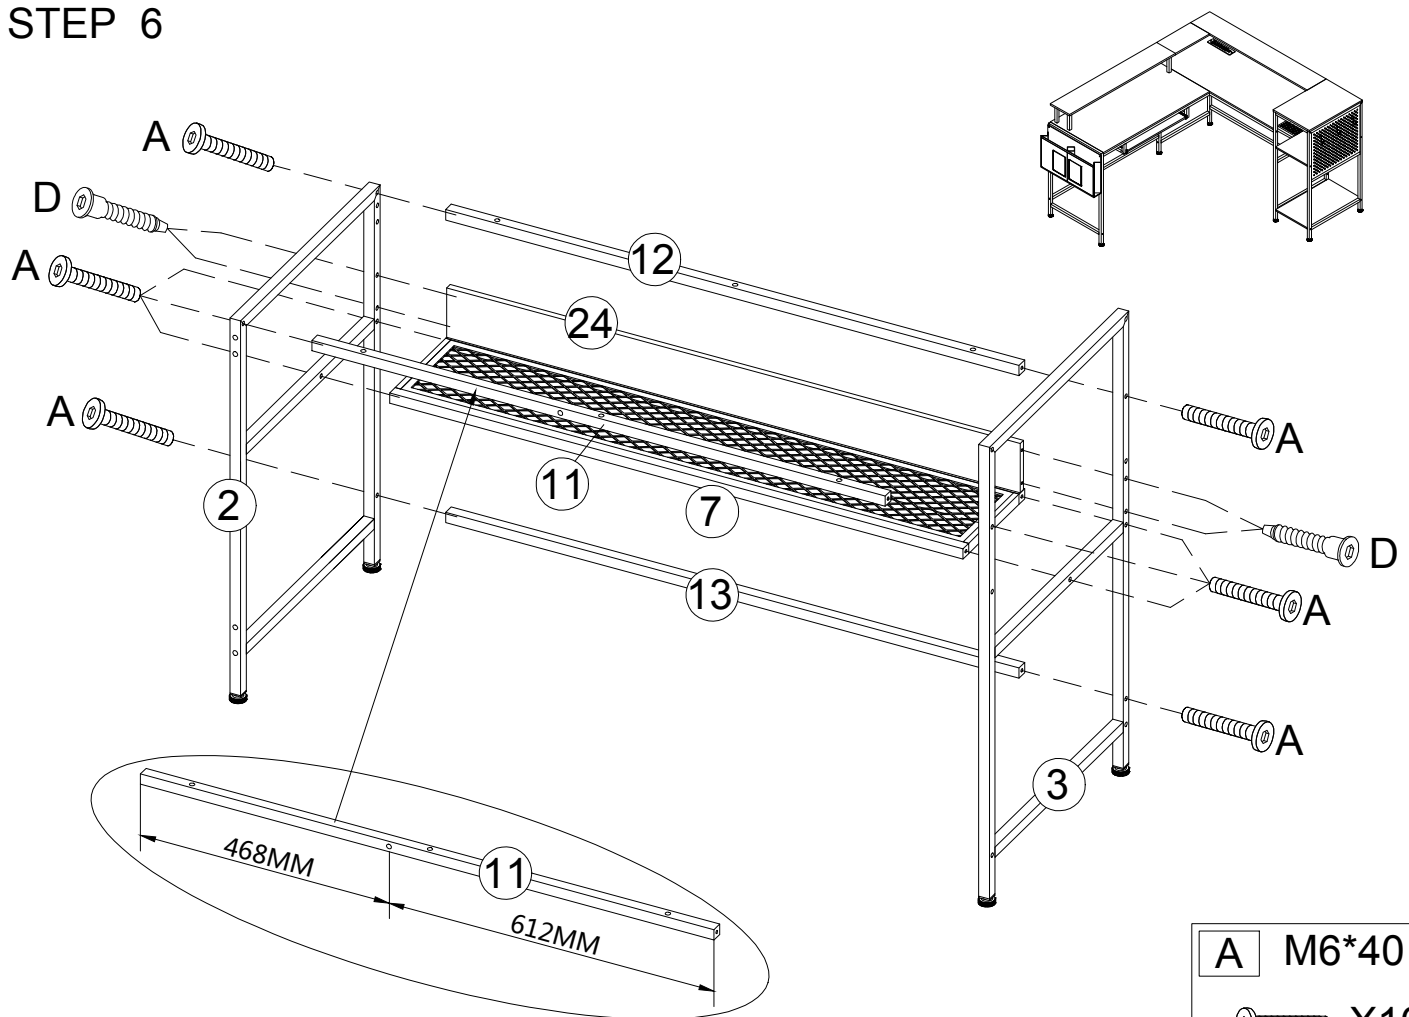

A M6*40


X10

D ST7*40


X4

ASSEMBLY INSTRUCTION

STEP 7

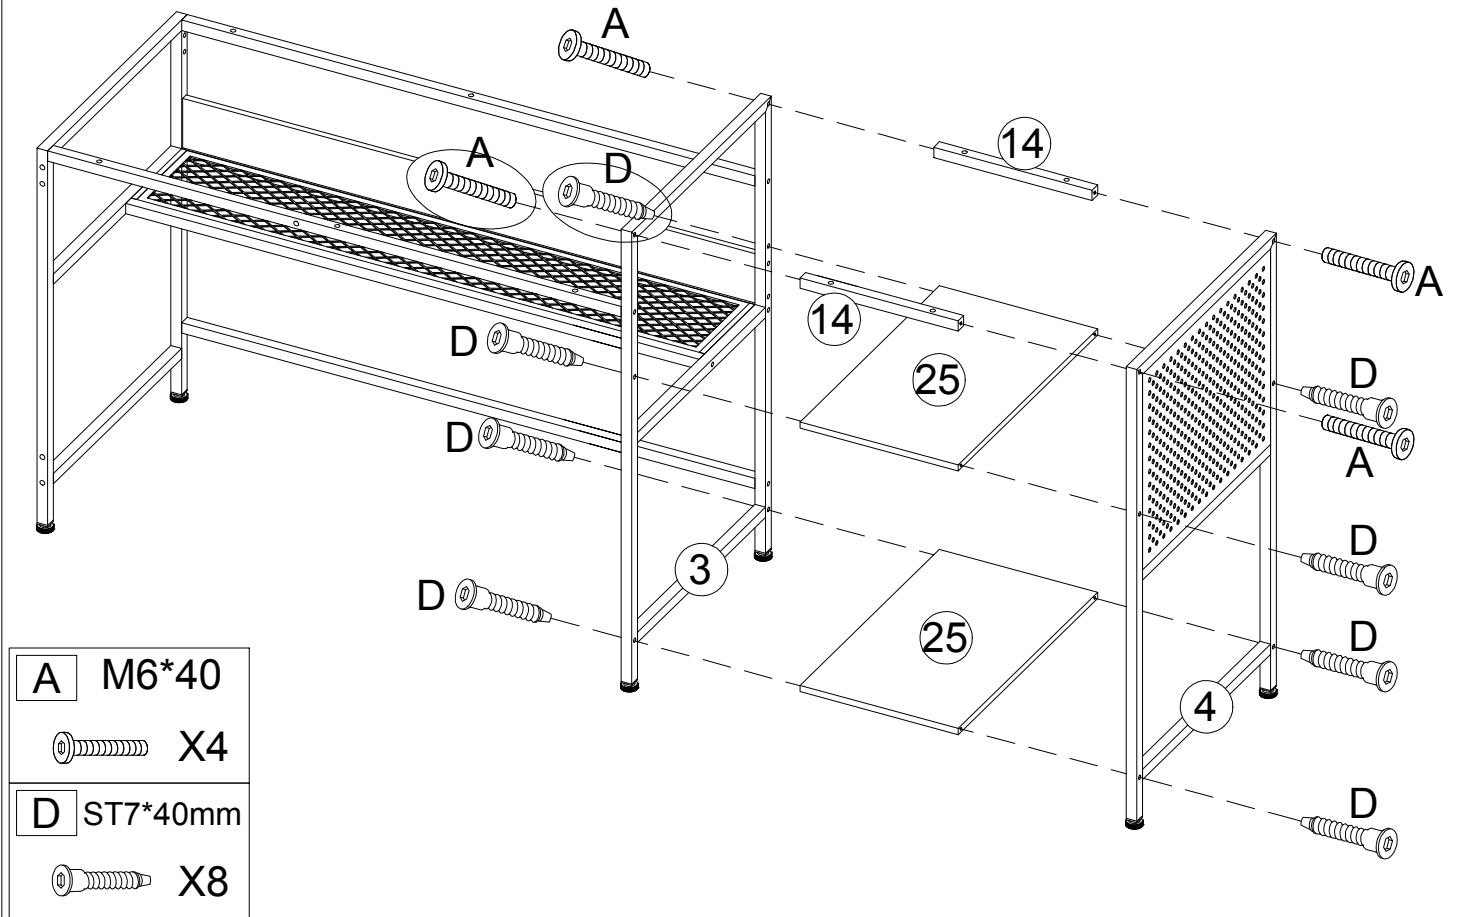


STEP 8

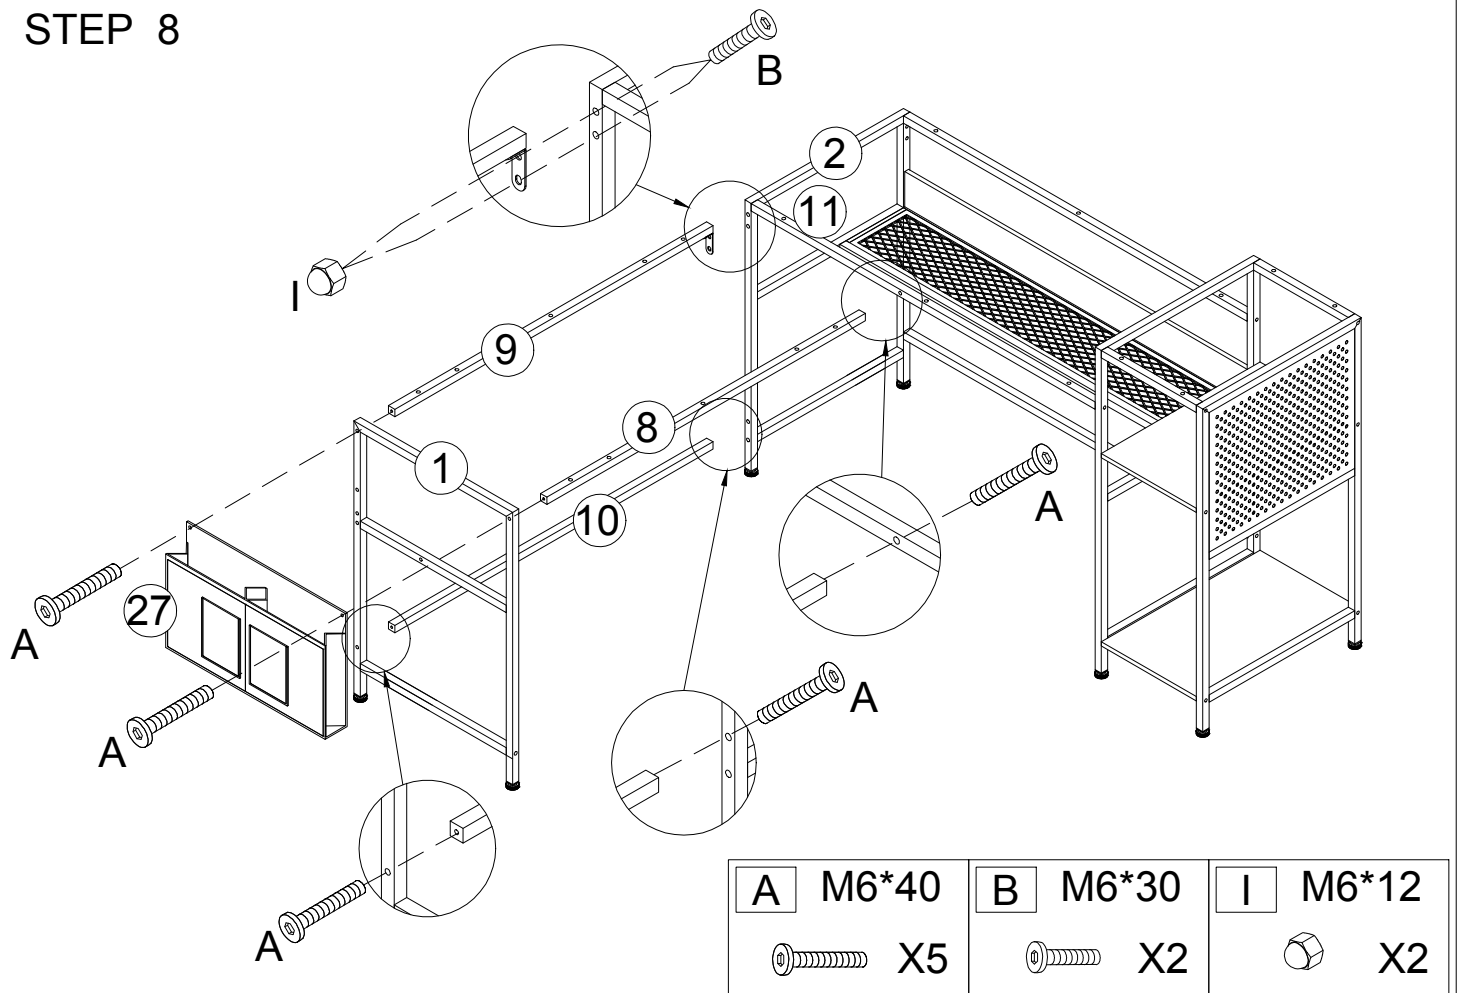


ASSEMBLY INSTRUCTION

STEP 11

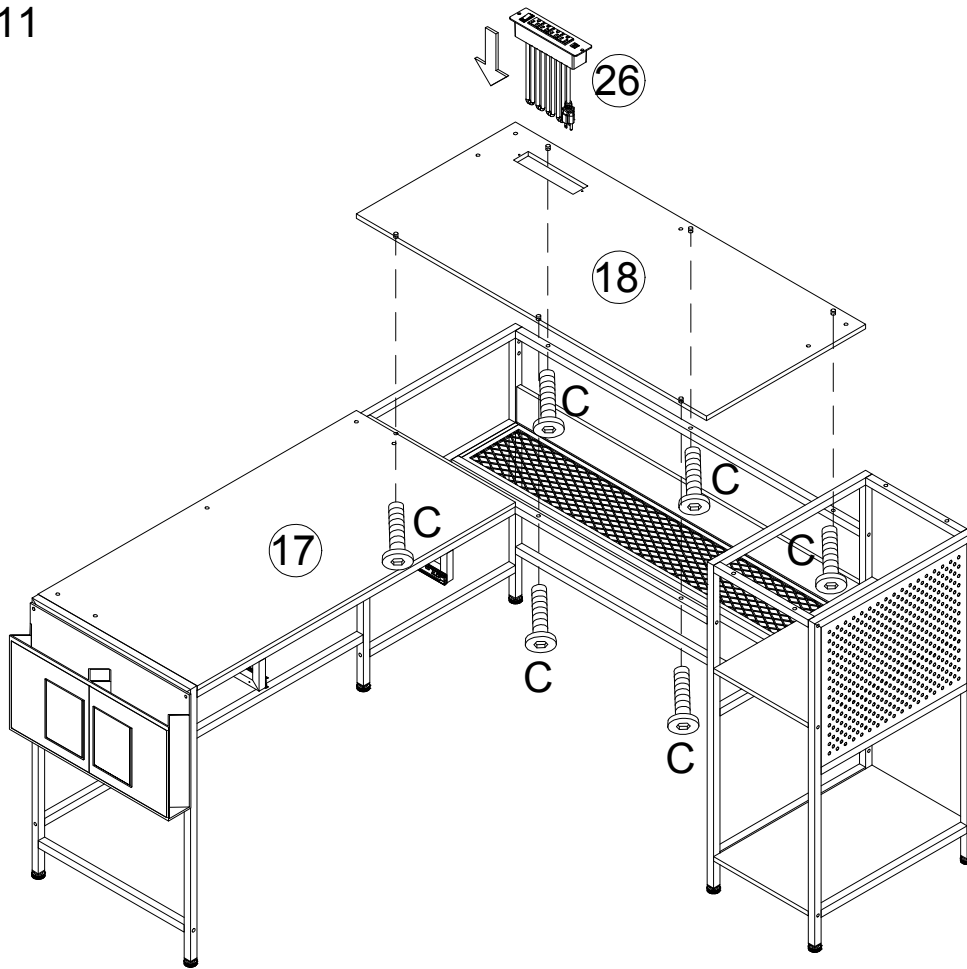

C M6*25
X6


STEP 12

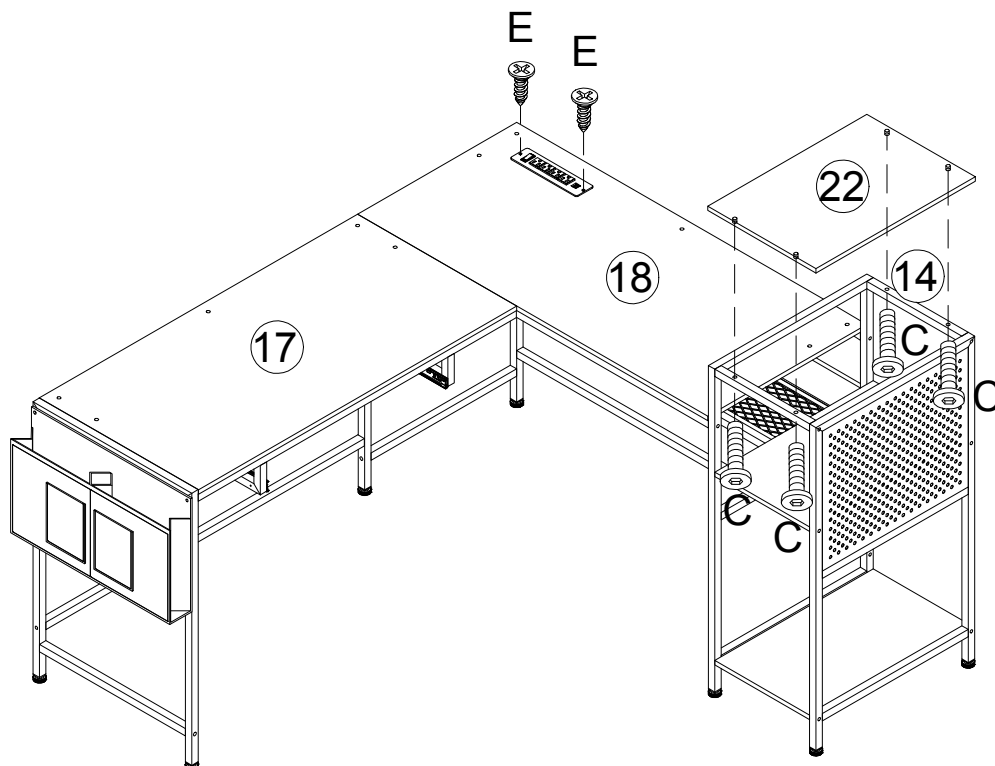


C M6*25
X4
E ST3.5*12
X2

ASSEMBLY INSTRUCTION


STEP 13

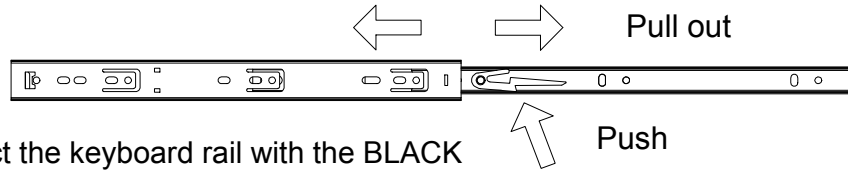


Disconnect the keyboard rail with the BLACK PLASTIC PART. It needs to be pulled down to disconnect the runners.

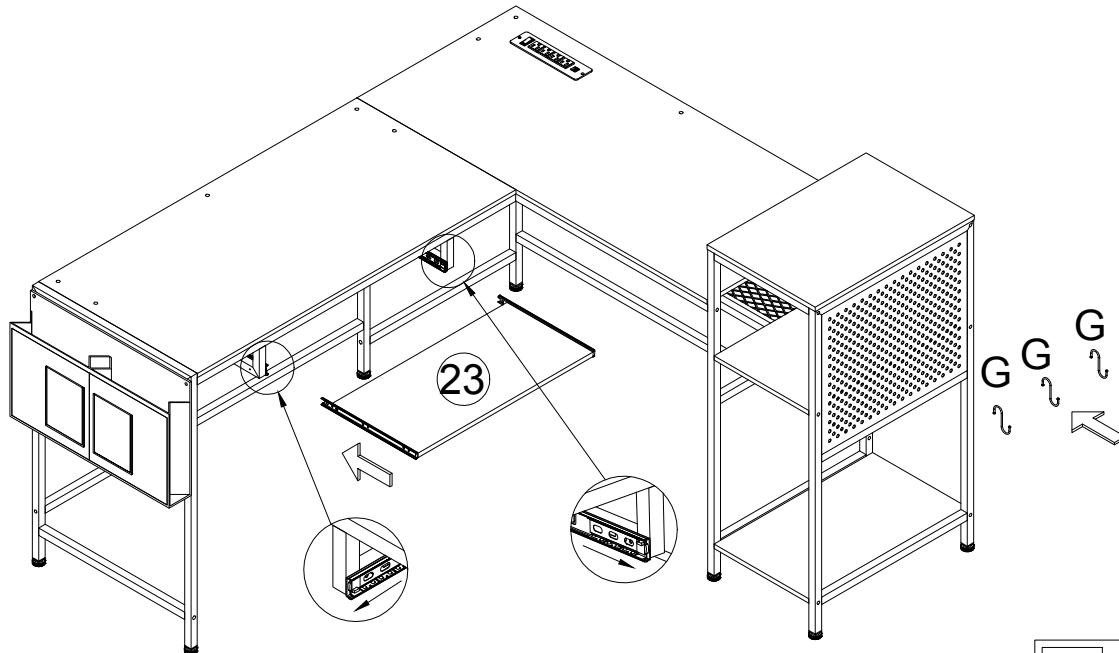



Move the movable iron piece with the small iron ball to the front and align the mounting rail.

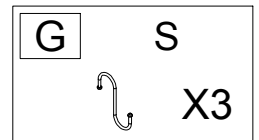

STEP 14

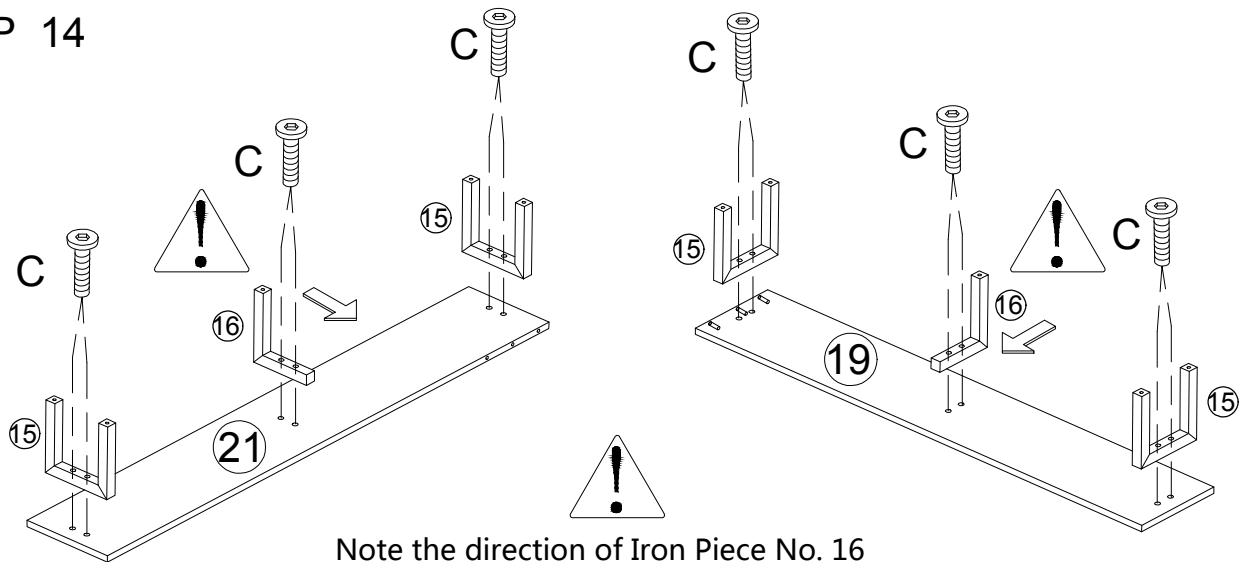


Note the direction of Iron Piece No. 16

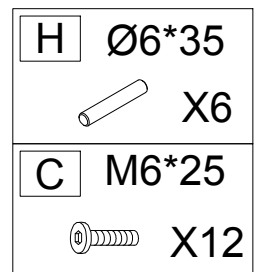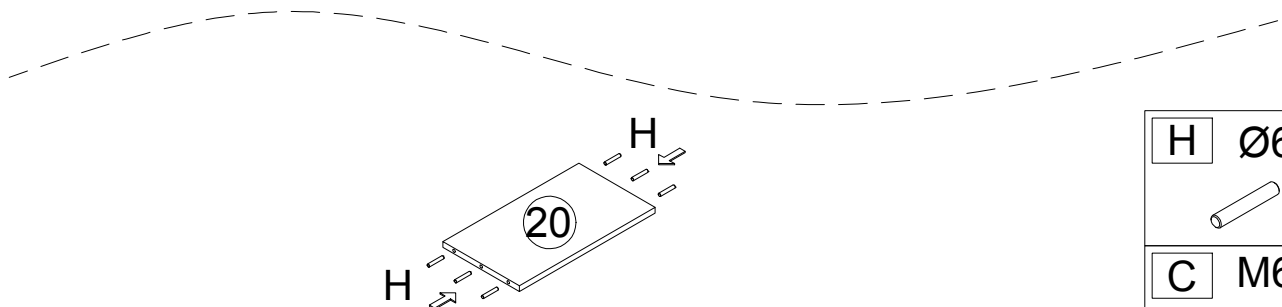


ASSEMBLY INSTRUCTION


STEP 15

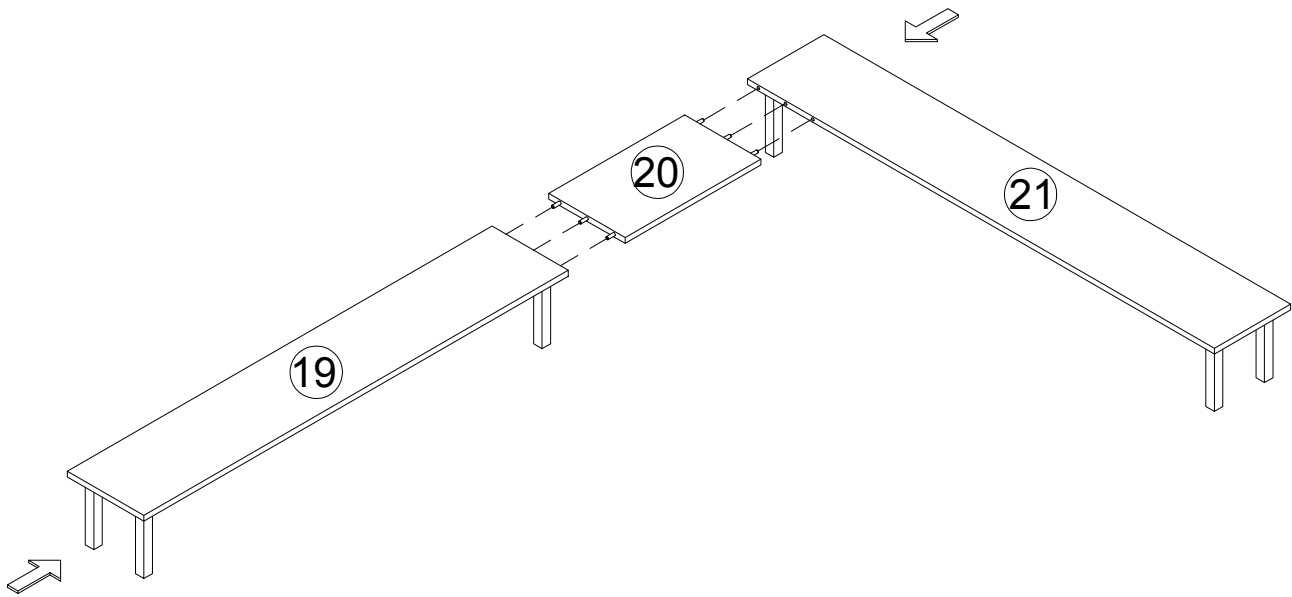

STEP 16

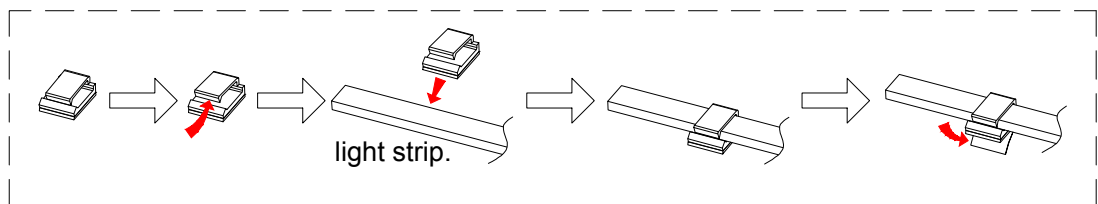


The light strip can be pasted to the desired position according to your own needs.

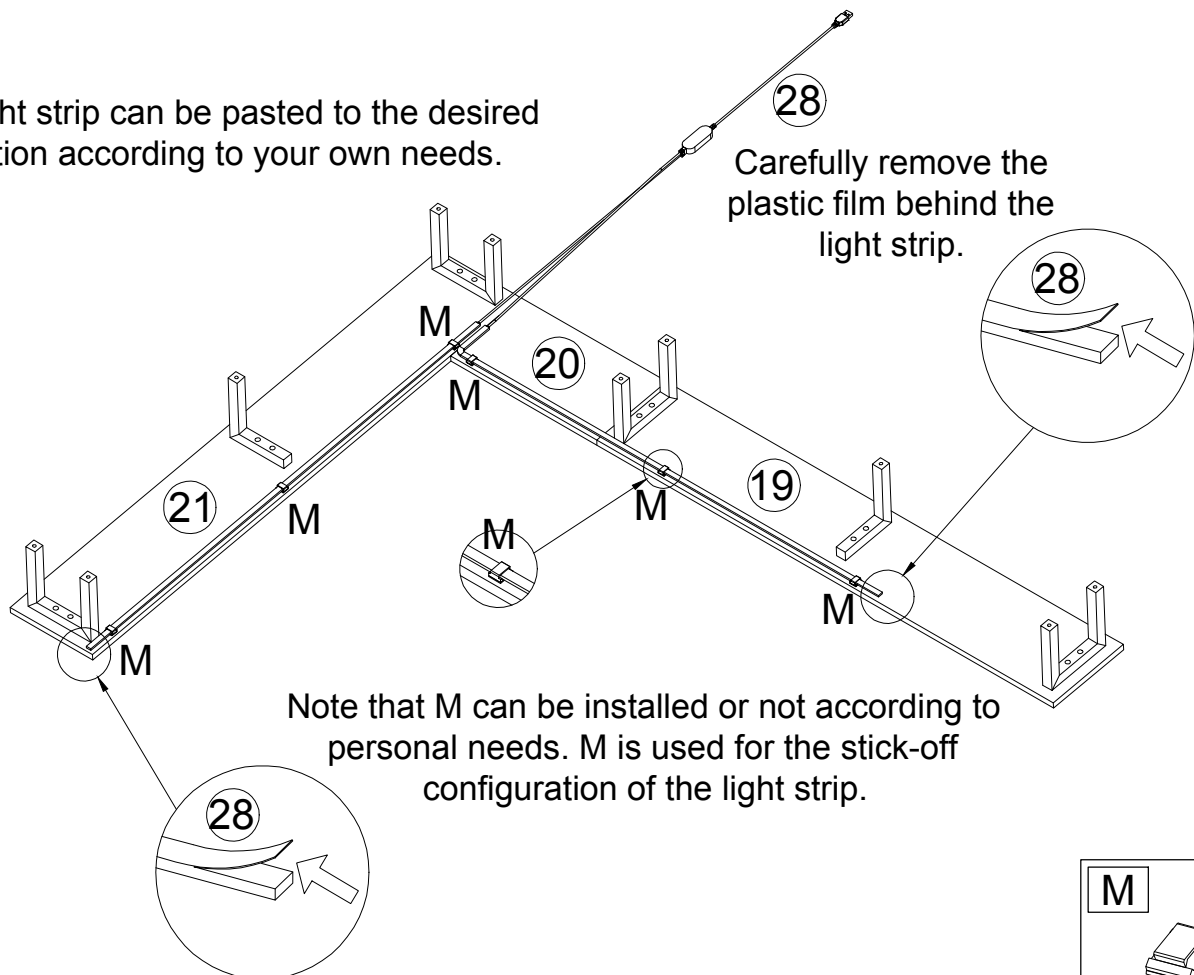


ASSEMBLY INSTRUCTION

STEP 17

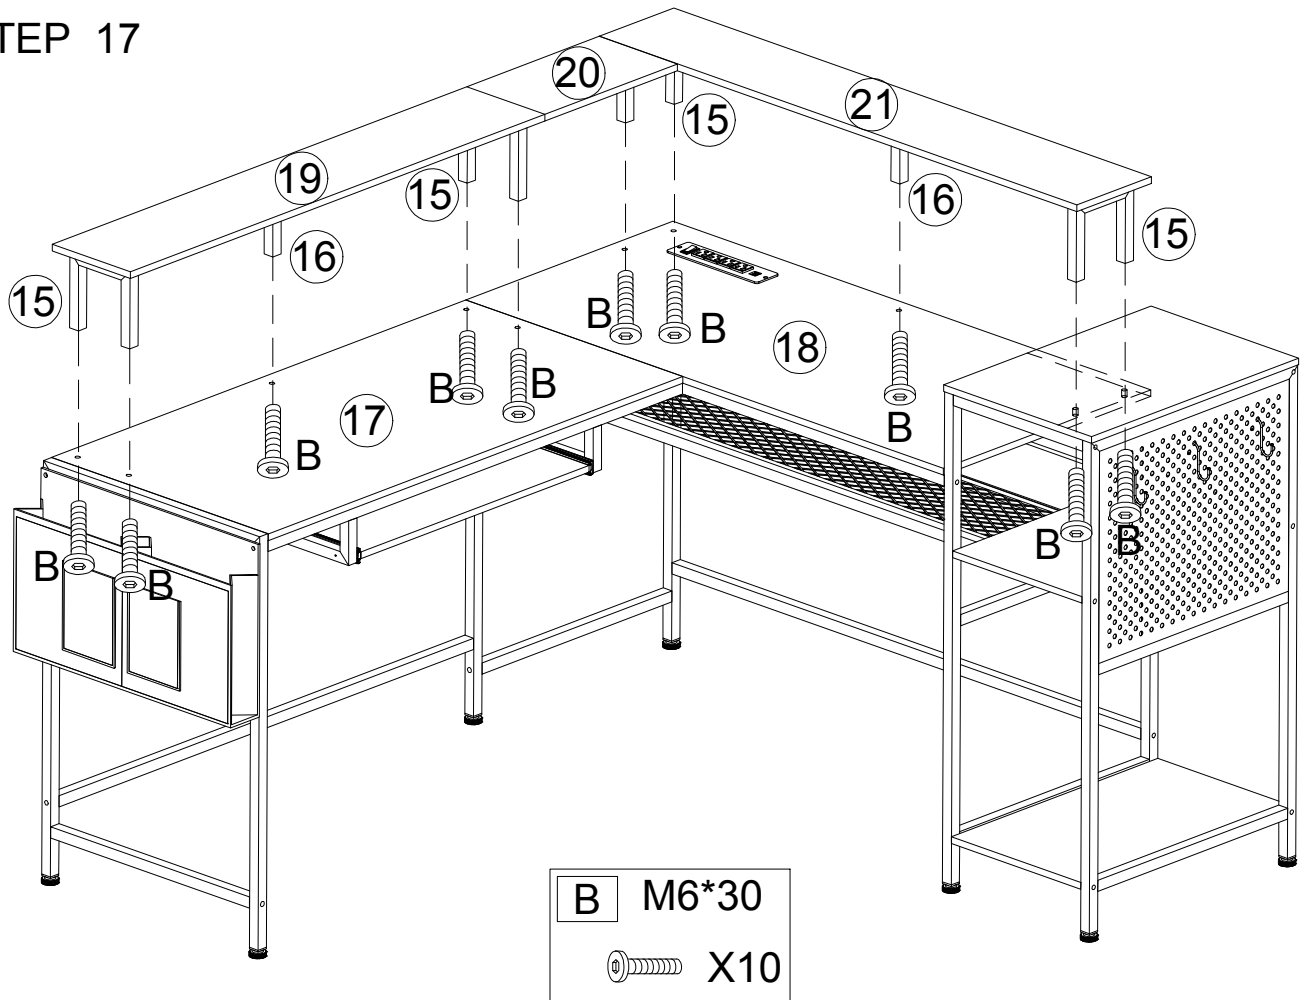


STEP 18

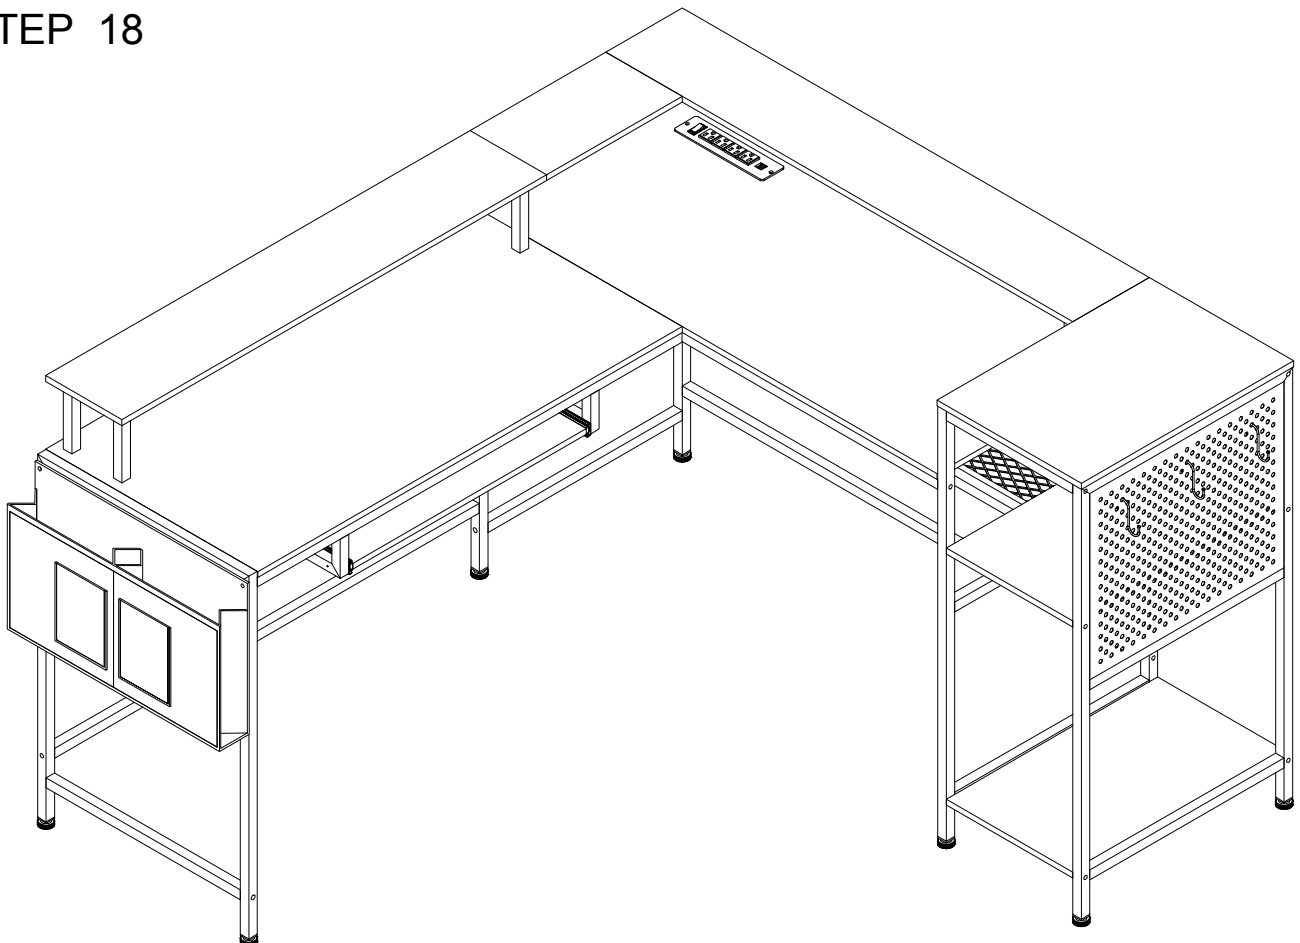

ASSEMBLY INSTRUCTION

STEP 19

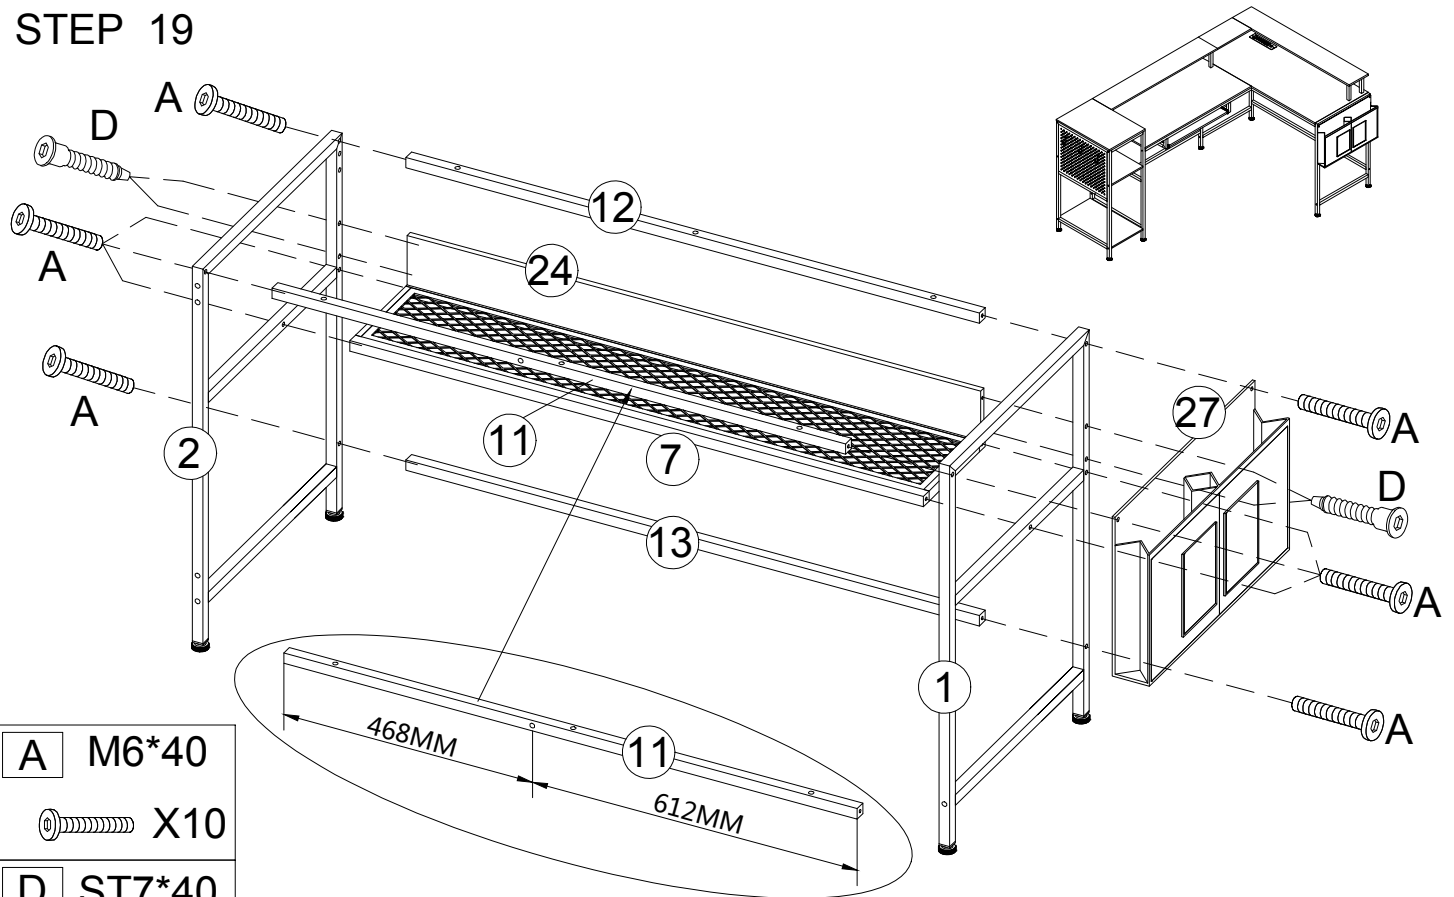


A M6*40

X10

D ST7*40

X4

STEP 20

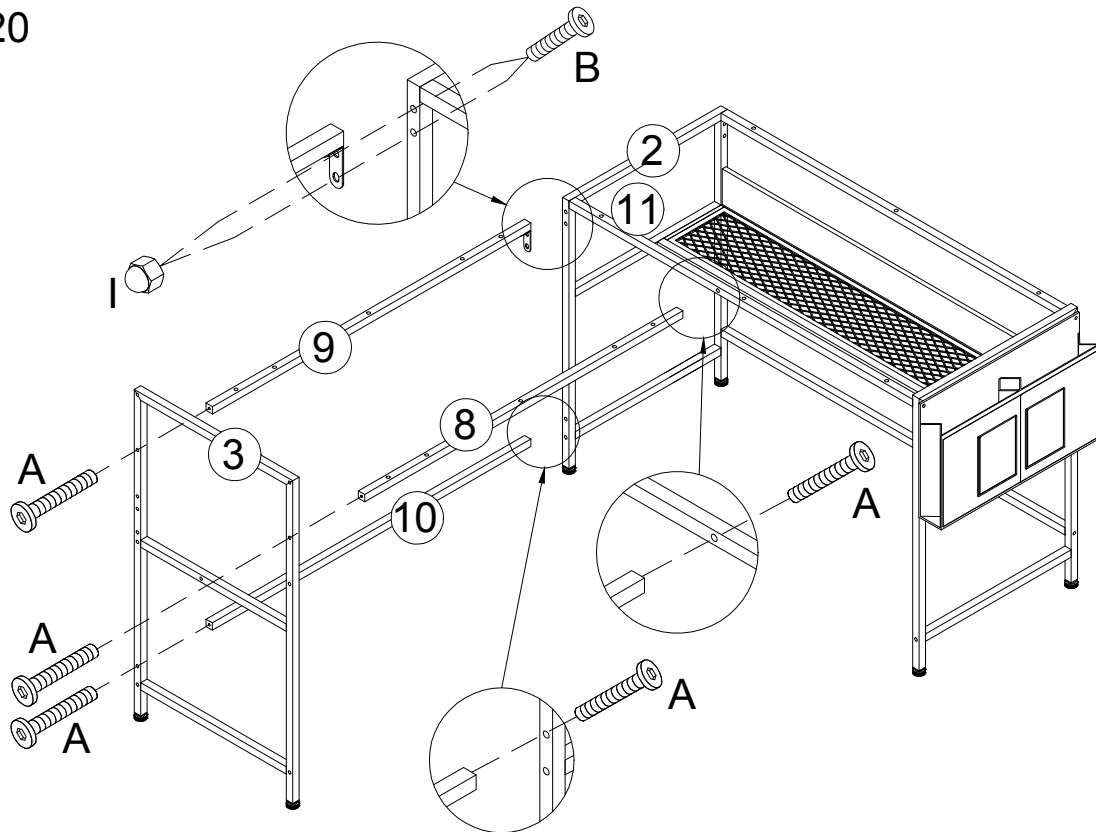

A M6*40

X5

B M6*30


X2

I M6*12


X2


ASSEMBLY INSTRUCTION

STEP 21

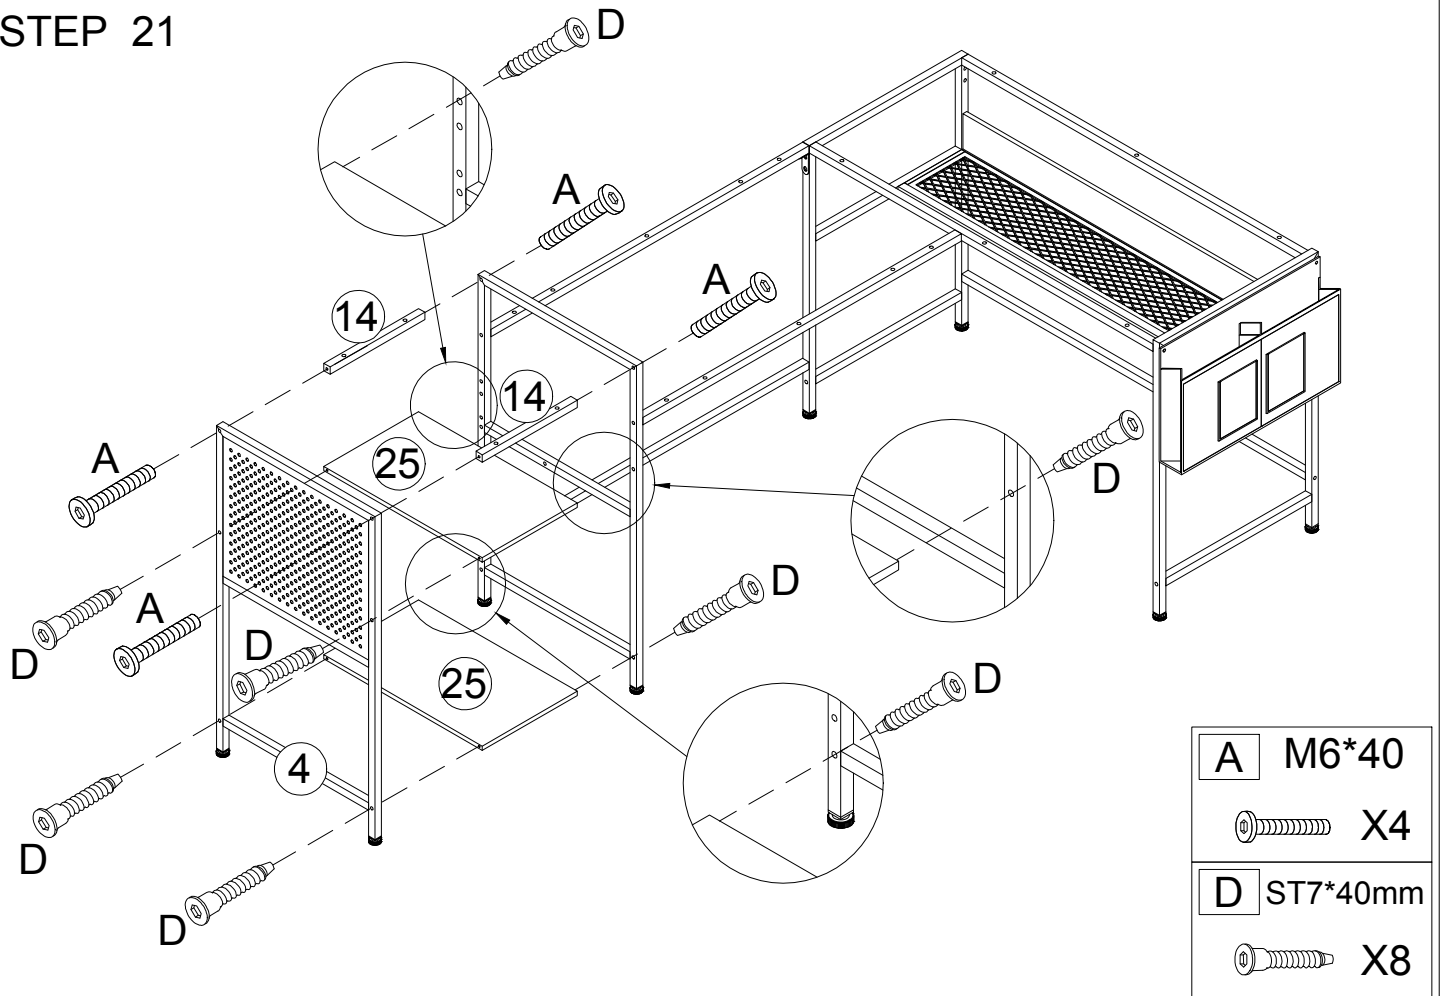


STEP 22

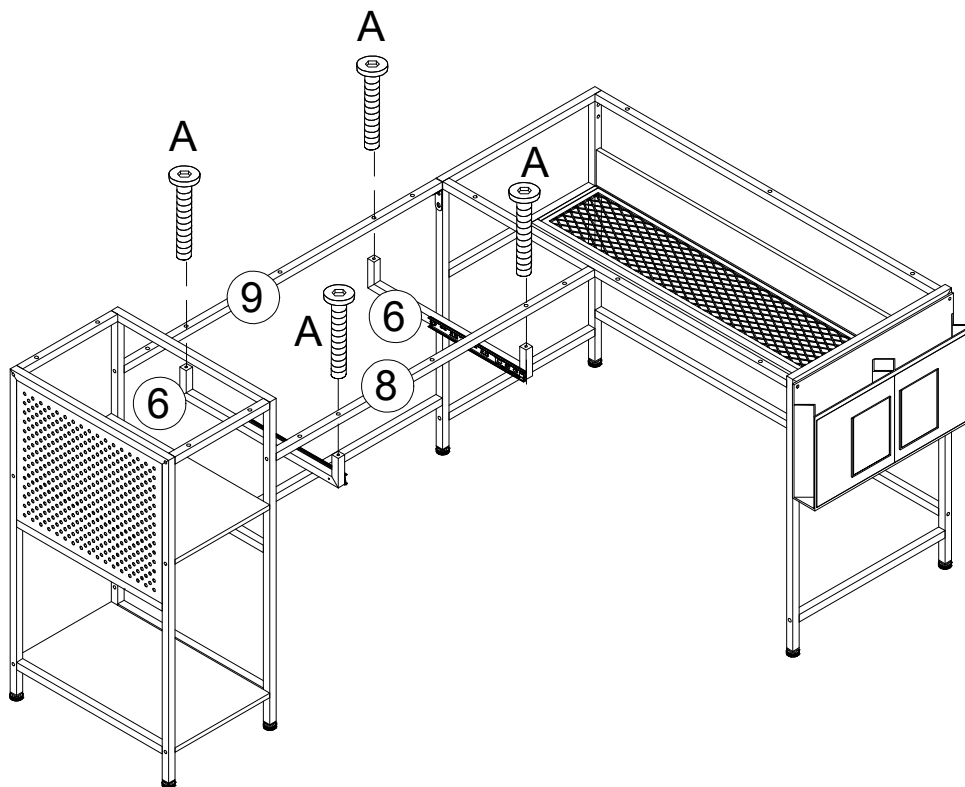

A	M6*40
	X4


ASSEMBLY INSTRUCTION

STEP 23

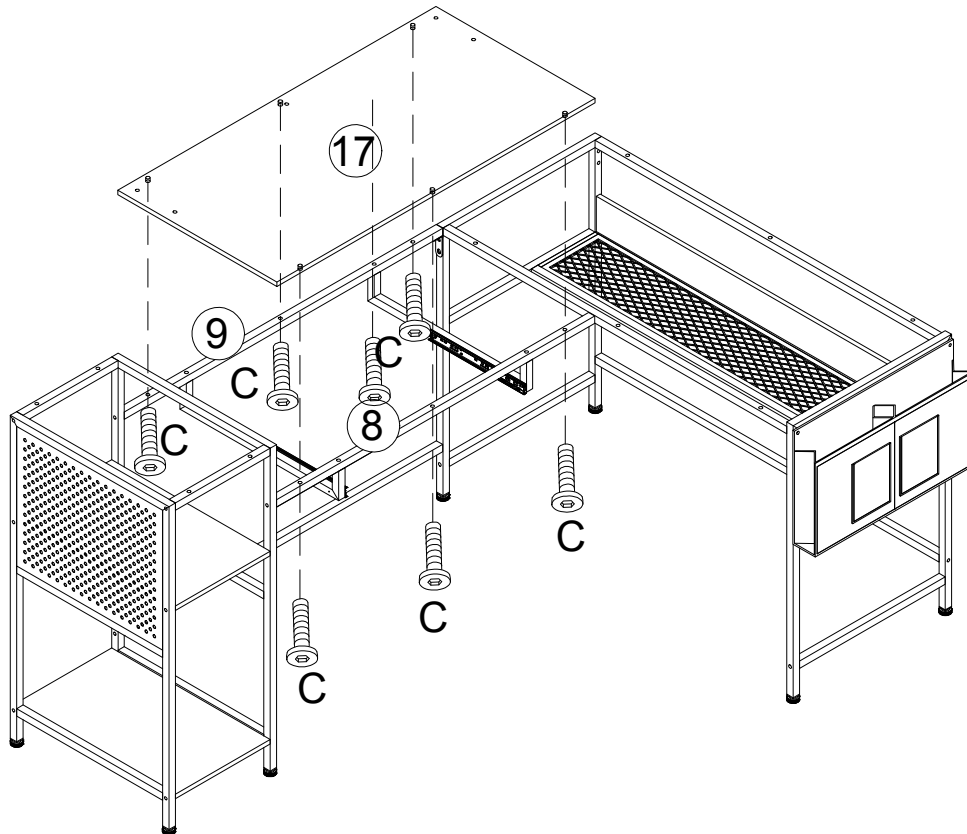

C M6*25
X6


STEP 24

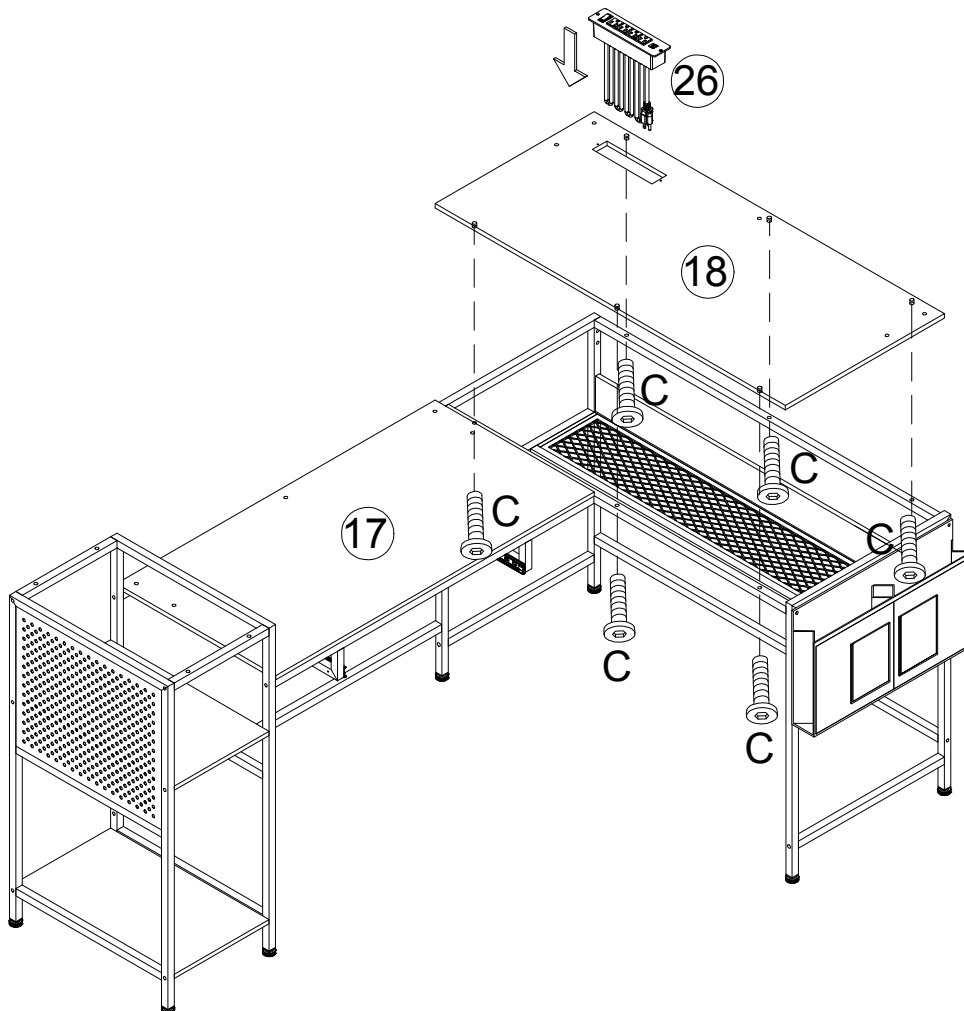



C M6*25
X6


ASSEMBLY INSTRUCTION

STEP 25

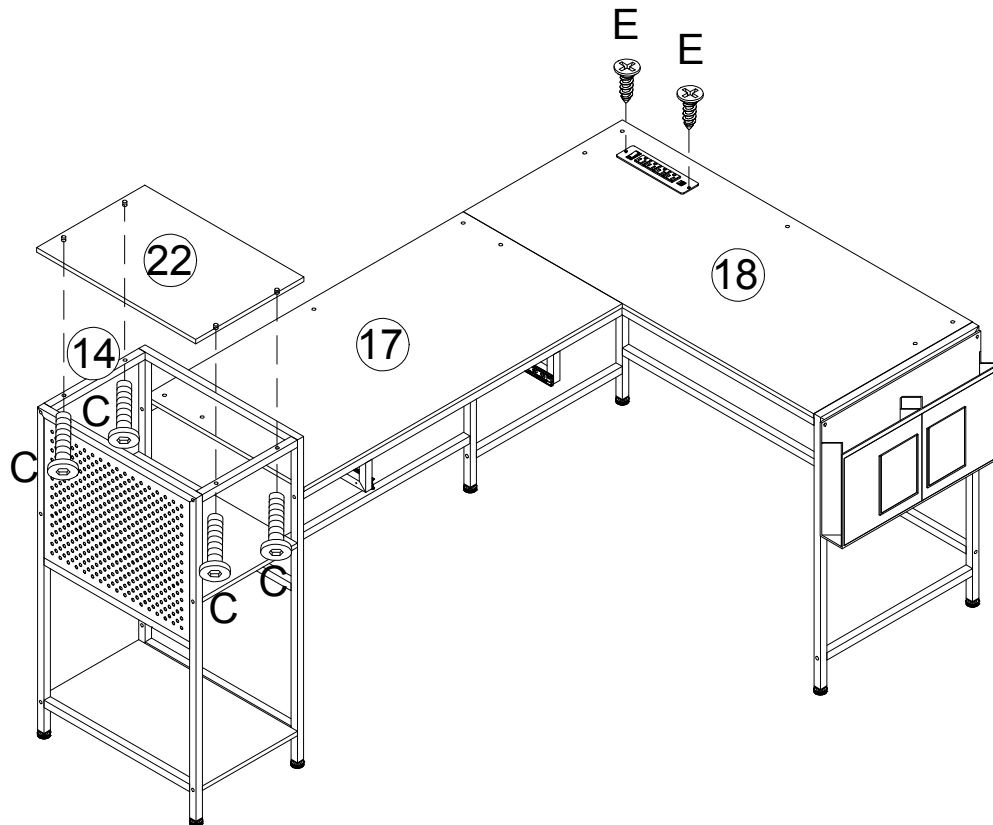


C	M6*25
	X4
E	ST3.5*12
	X2


STEP 26

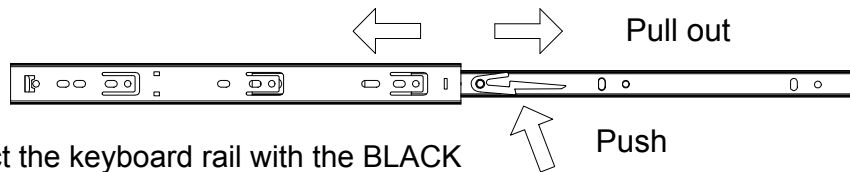

Disconnect the keyboard rail with the BLACK PLASTIC PART. It needs to be pulled down to disconnect the runners.


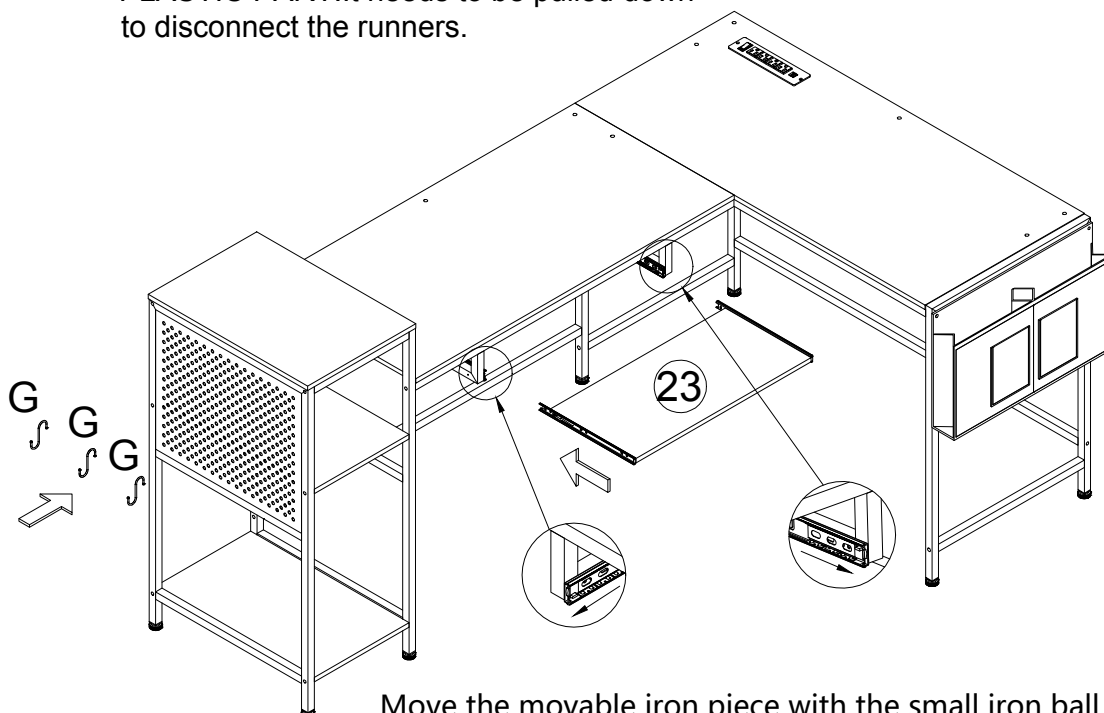


Move the movable iron piece with the small iron ball to the front and align the mounting rail.

G	S
	X3


ASSEMBLY INSTRUCTION

STEP 27

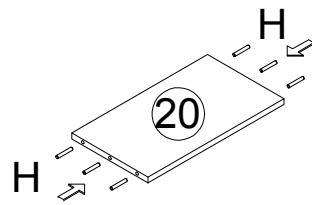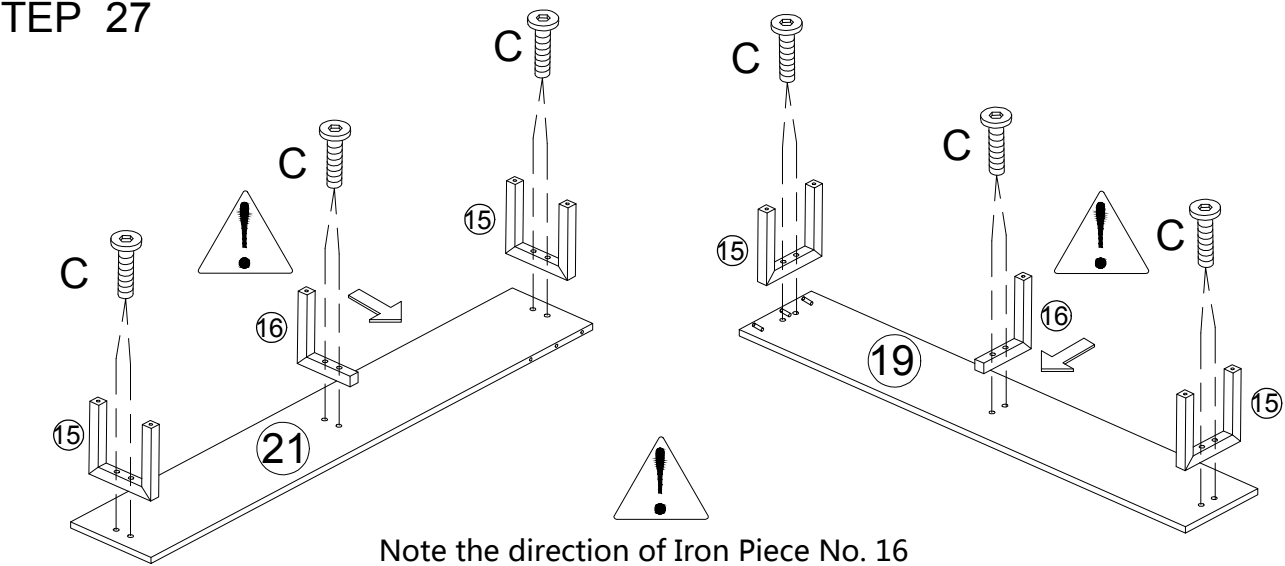


H	Ø6*35
	X6
C	M6*25
	X12

STEP 28

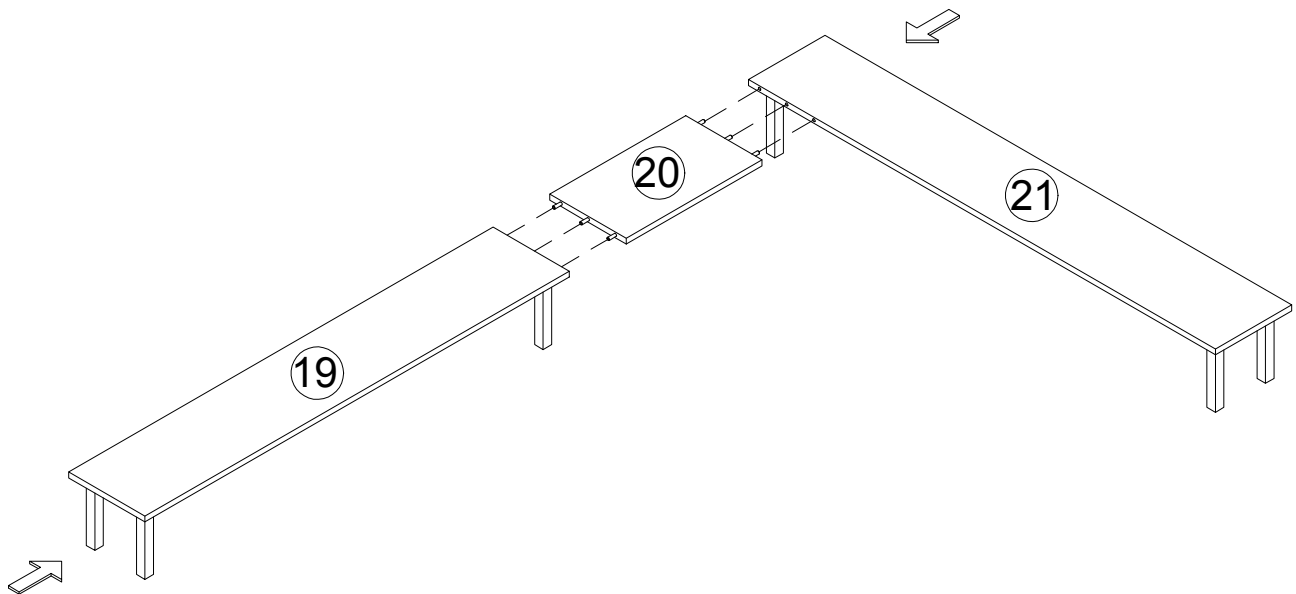


ASSEMBLY INSTRUCTION


STEP 29

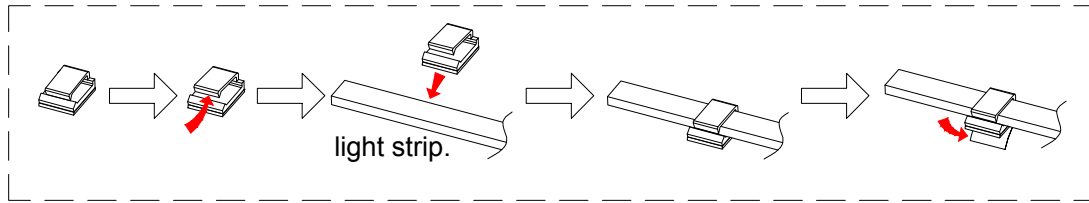

The light strip can be pasted to the desired position according to your own needs.

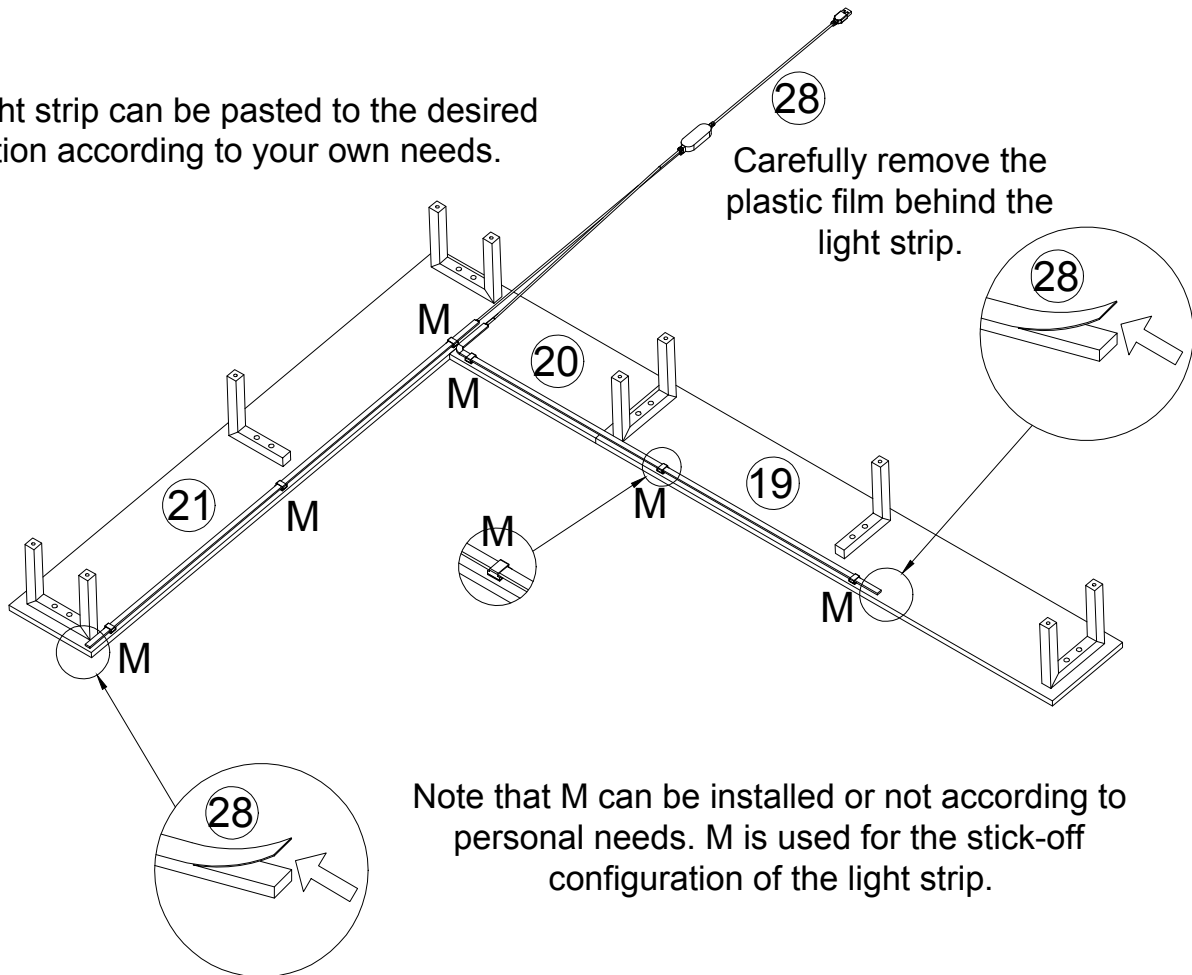


Note that M can be installed or not according to personal needs. M is used for the stick-off configuration of the light strip.

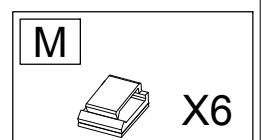


ASSEMBLY INSTRUCTION

STEP 30

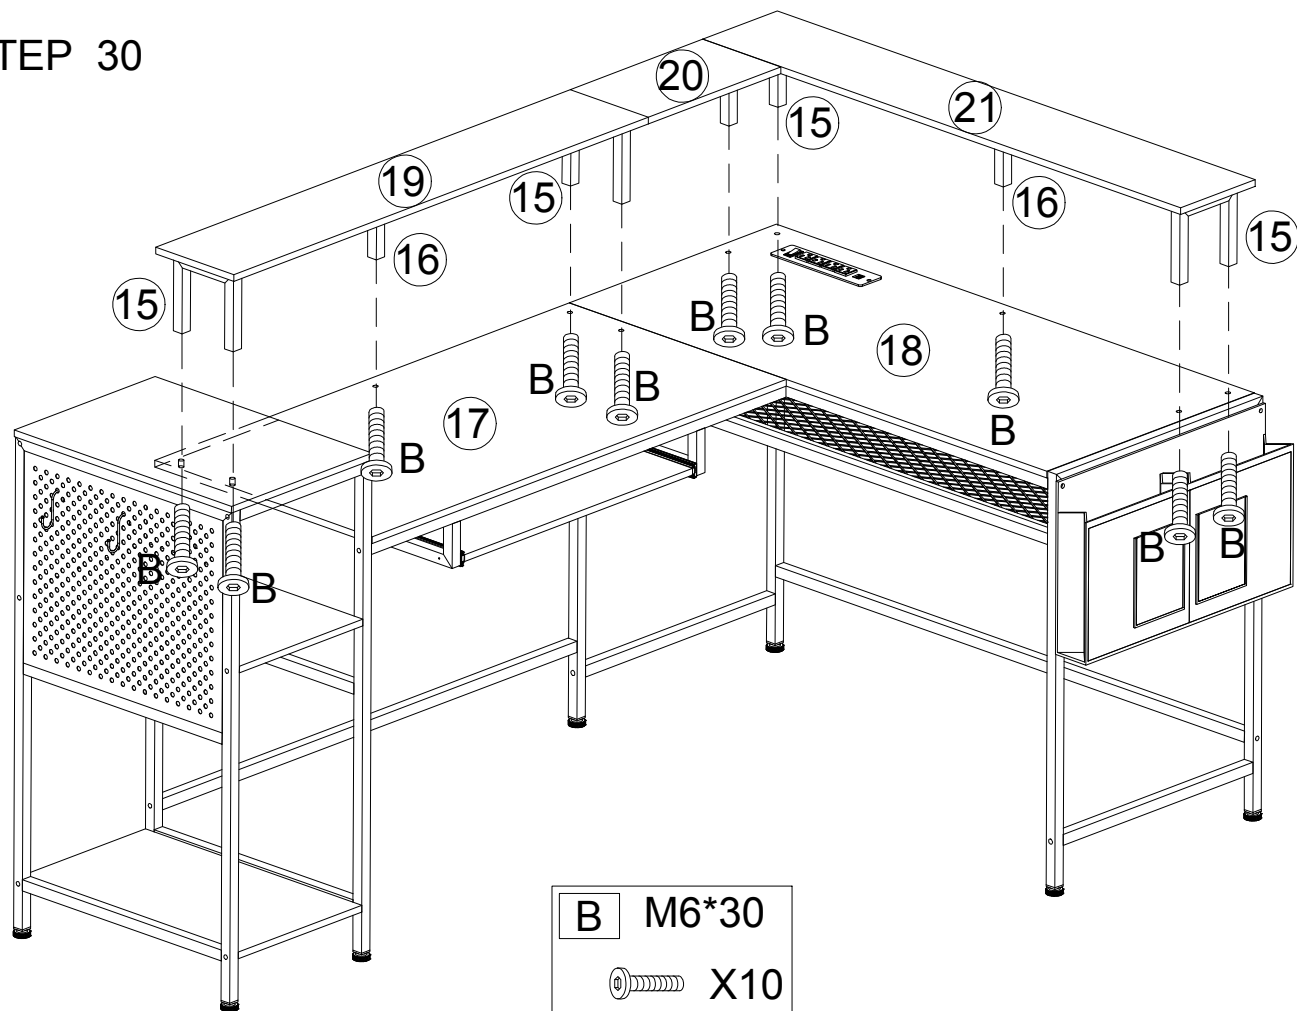


STEP 31

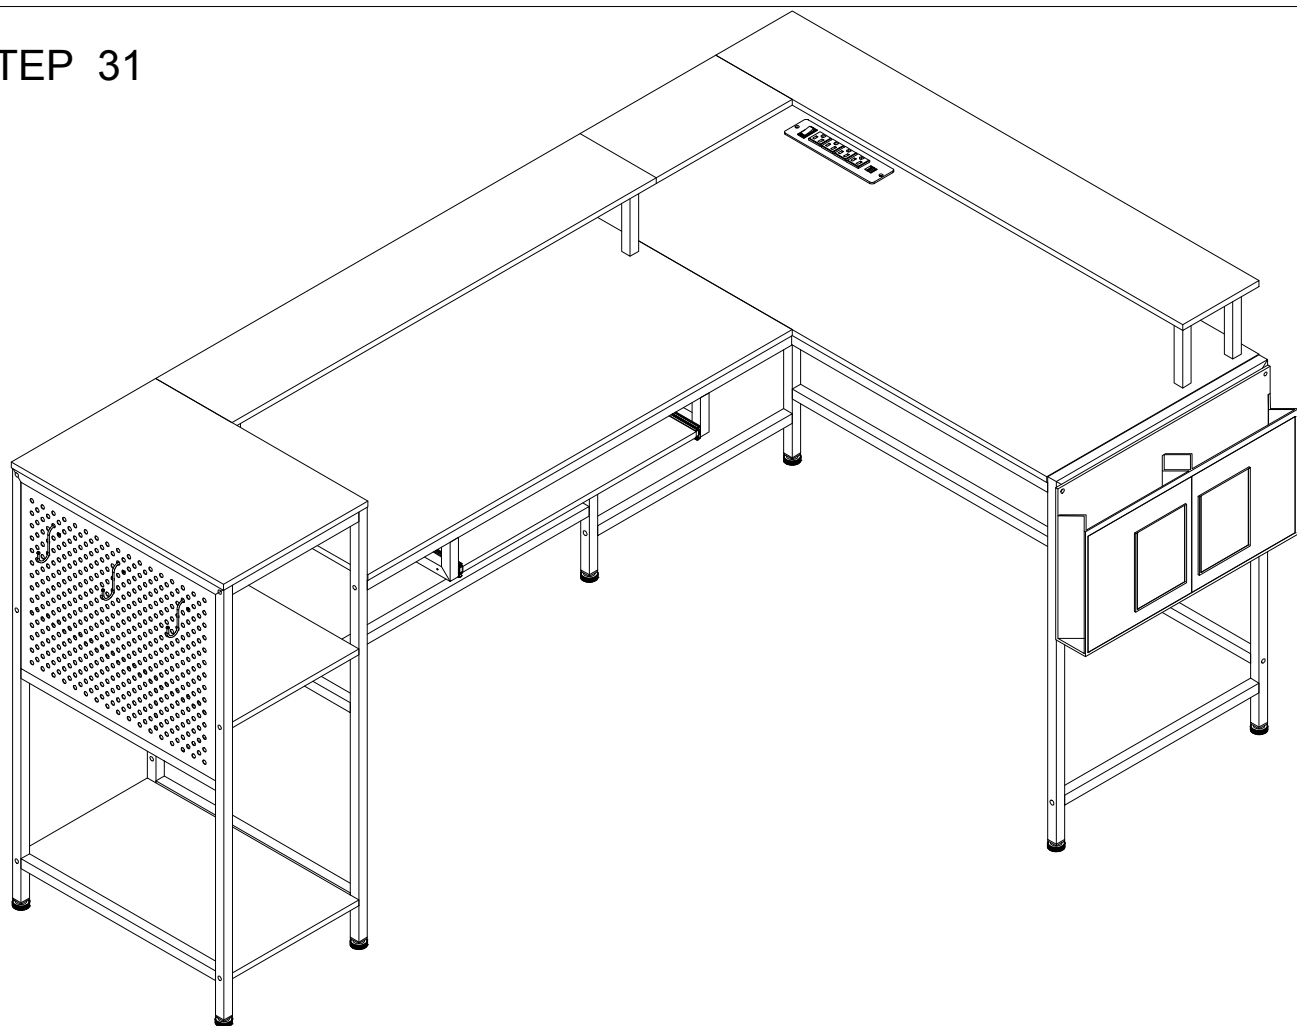


ASSEMBLY INSTRUCTION

STEP 32

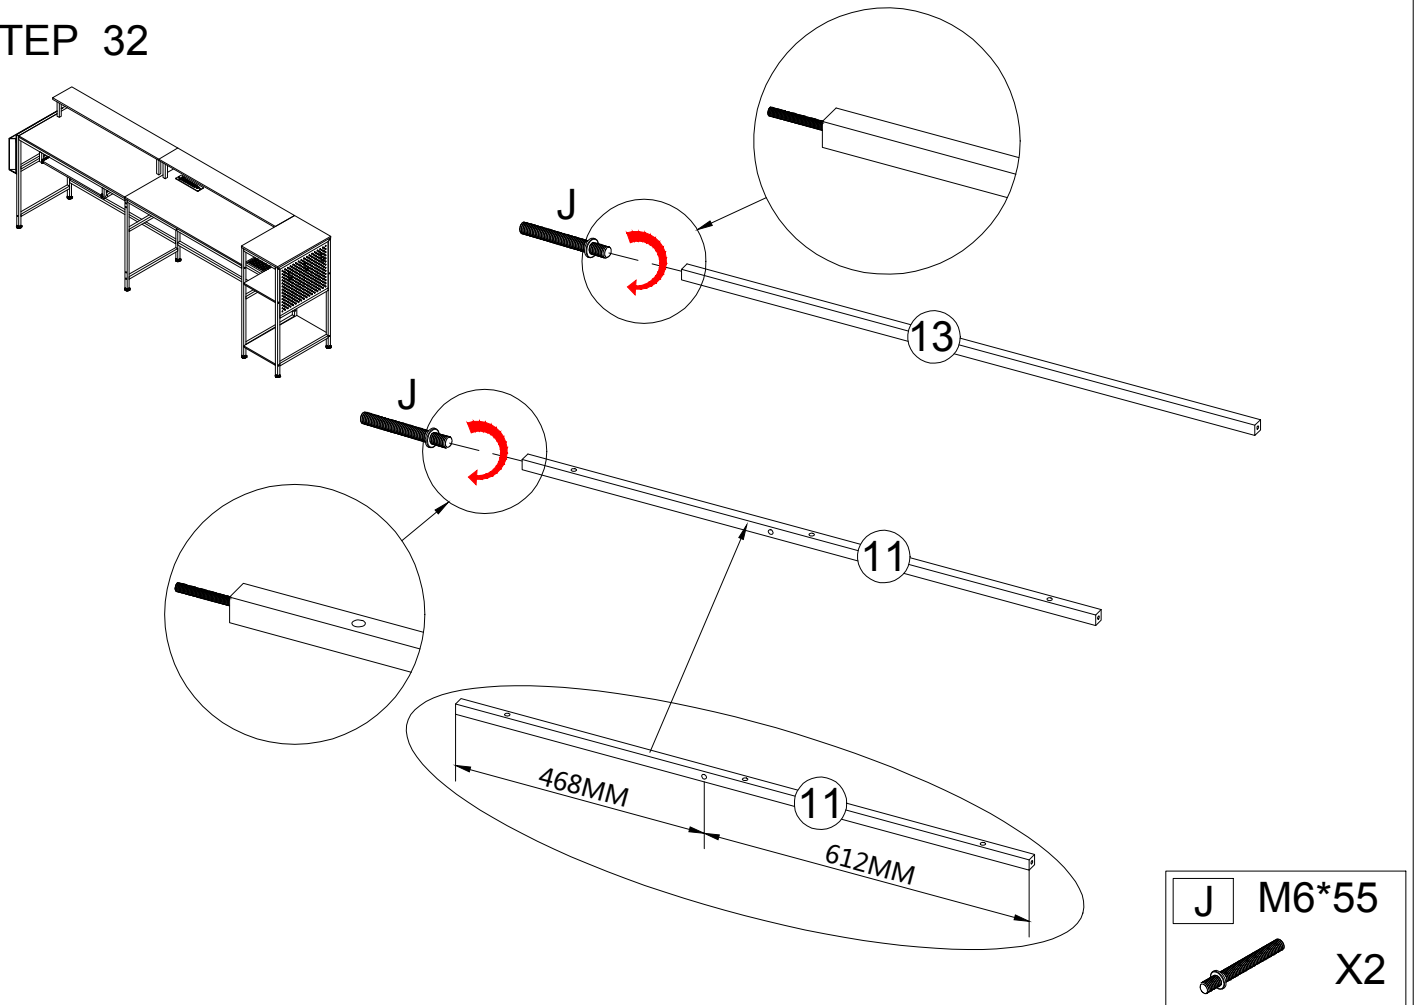


STEP 33

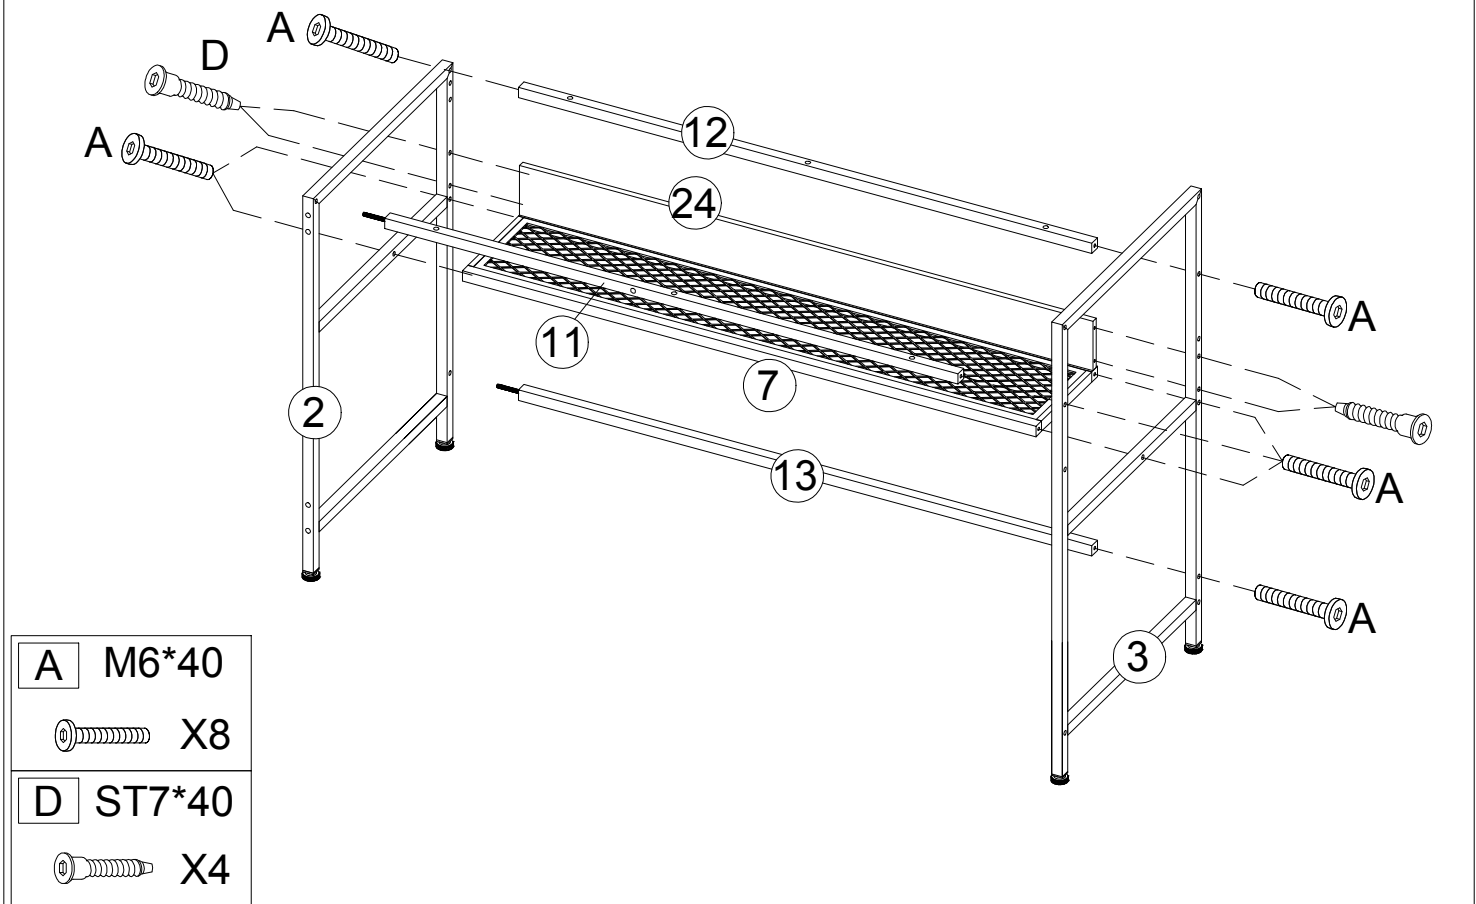


ASSEMBLY INSTRUCTION

STEP 34

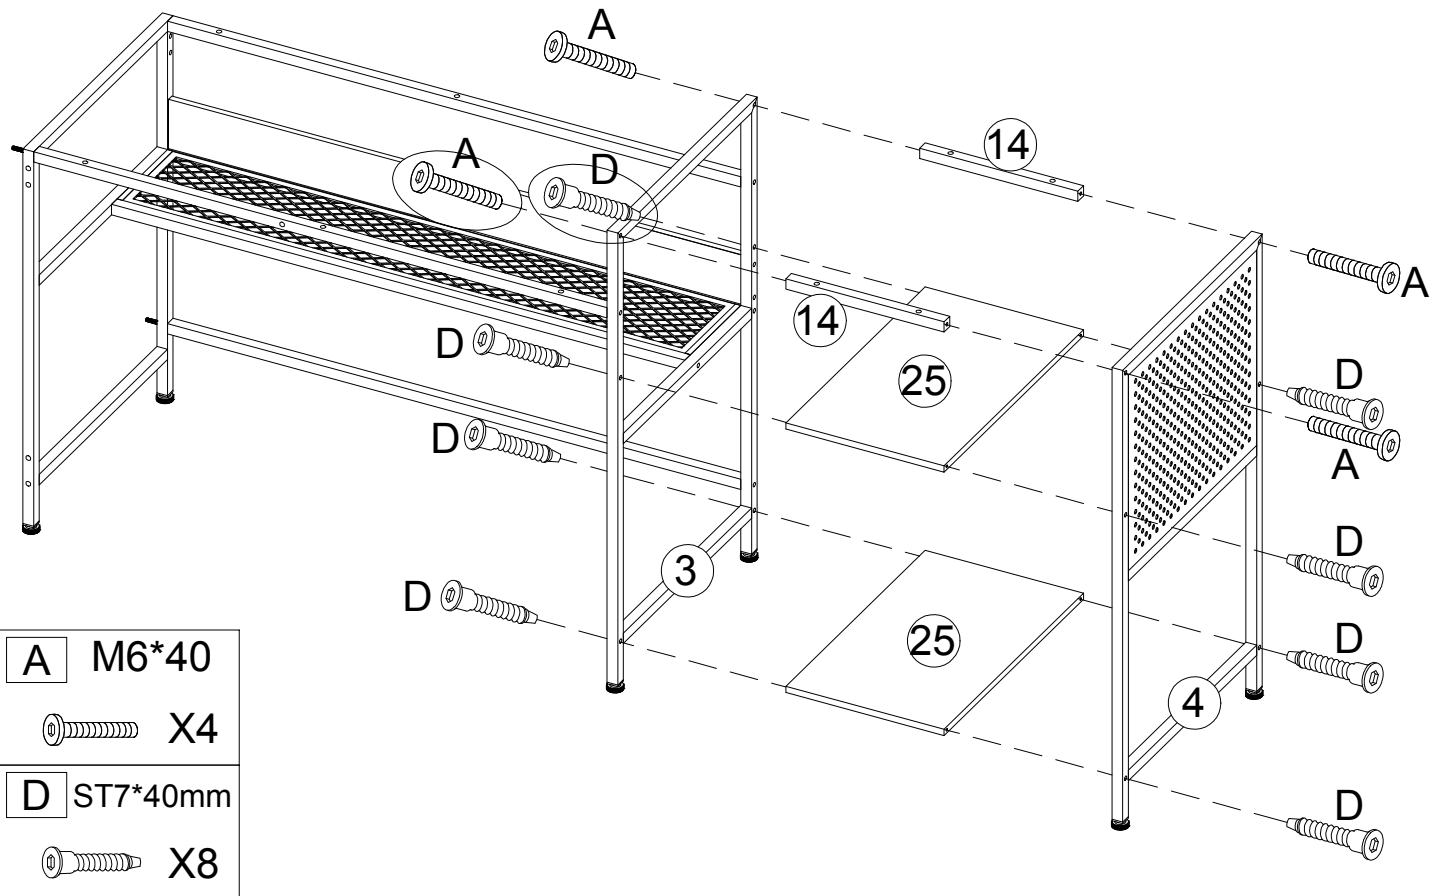


STEP 35

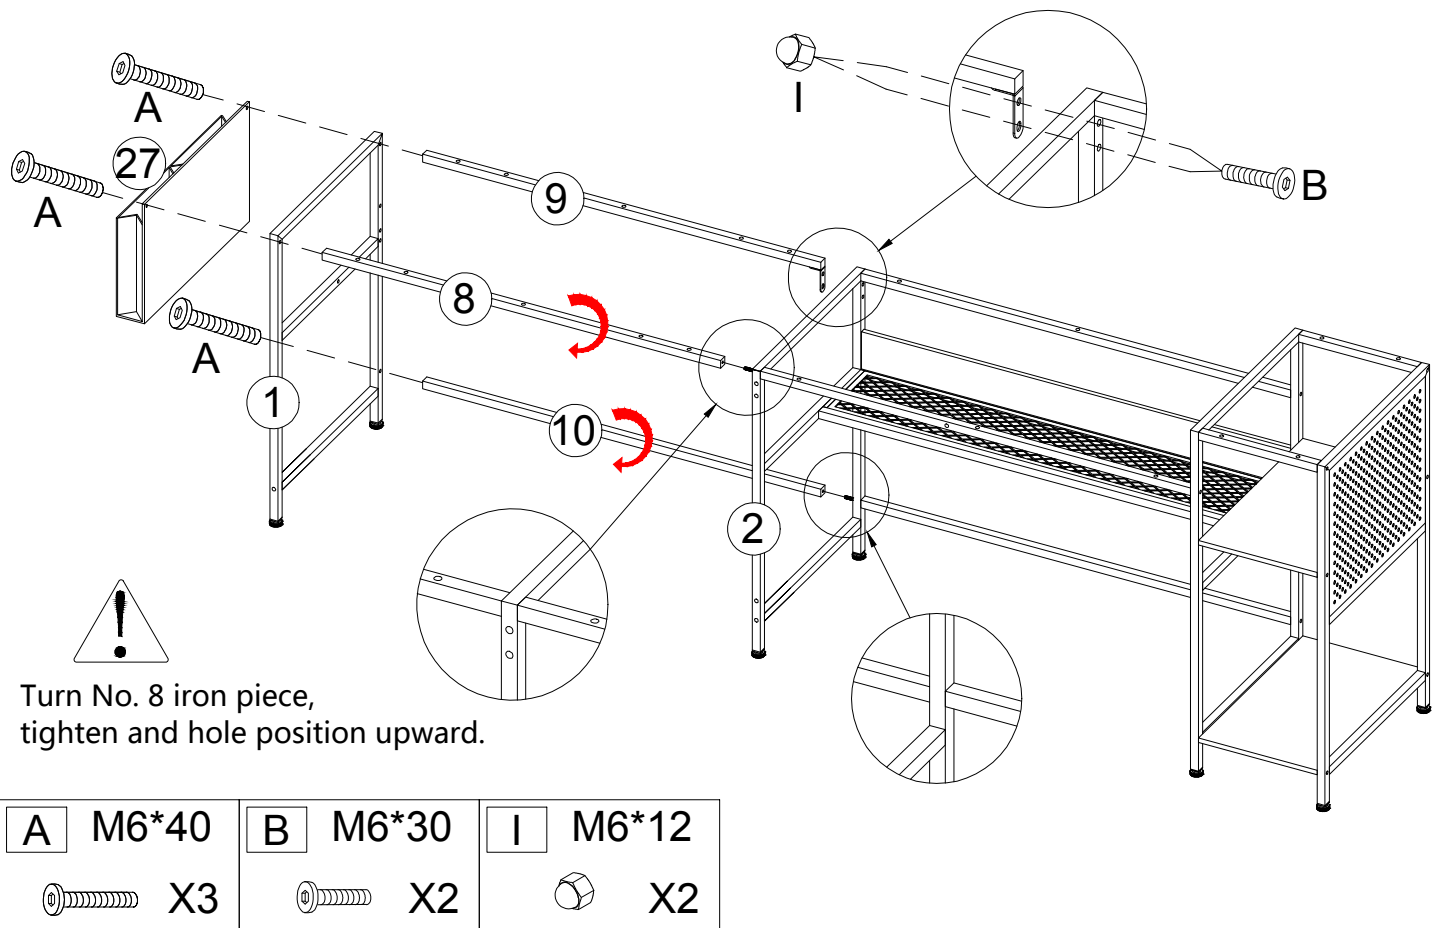

ASSEMBLY INSTRUCTION


STEP 36

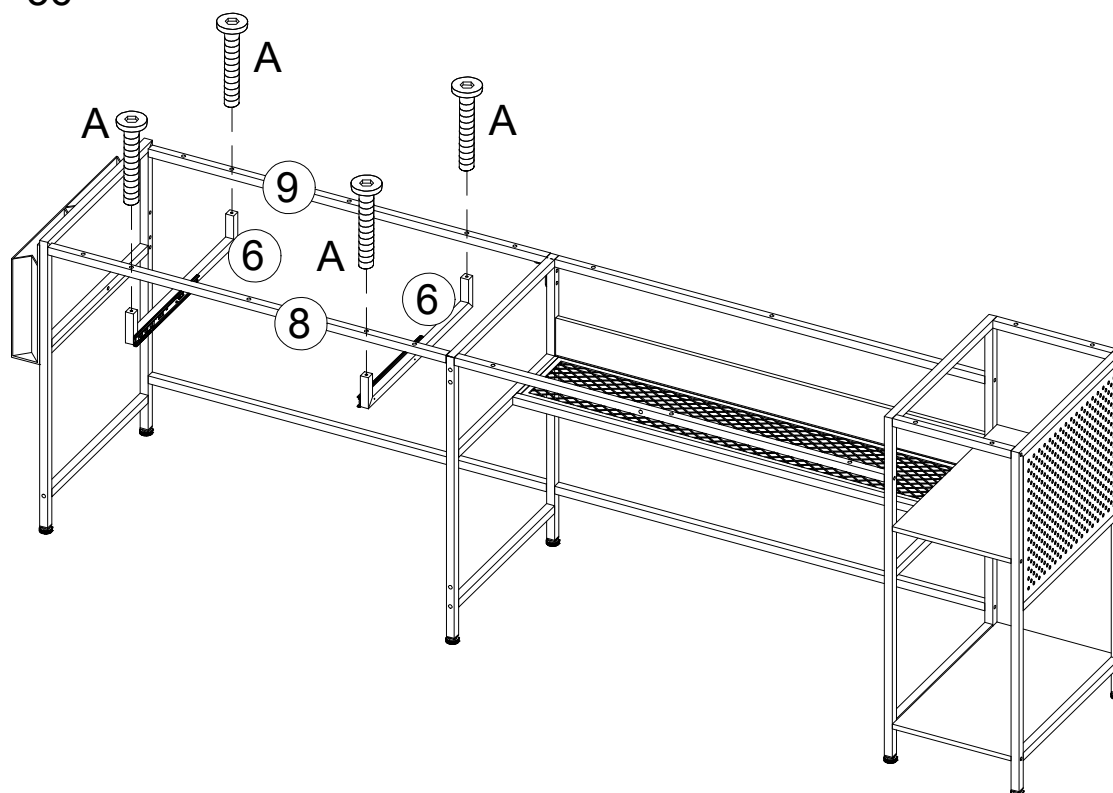

A M6*40

X4

STEP 37

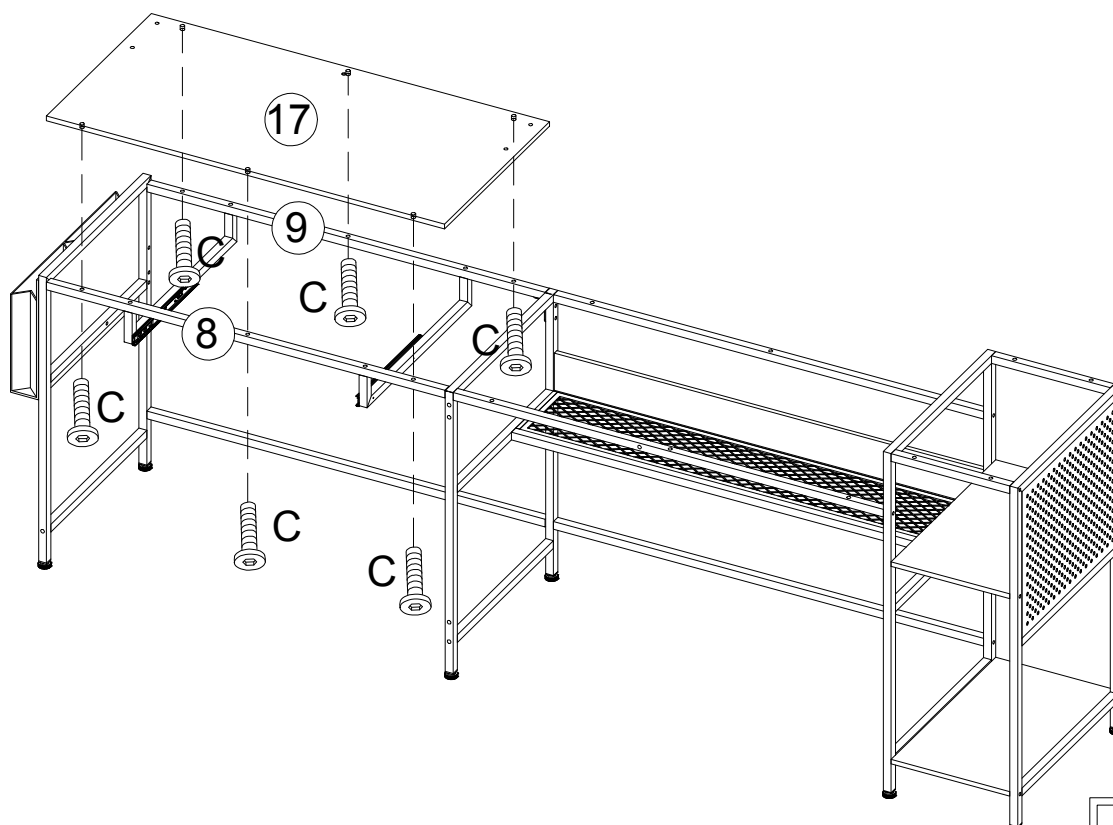


C M6*25

X6


ASSEMBLY INSTRUCTION

STEP 38

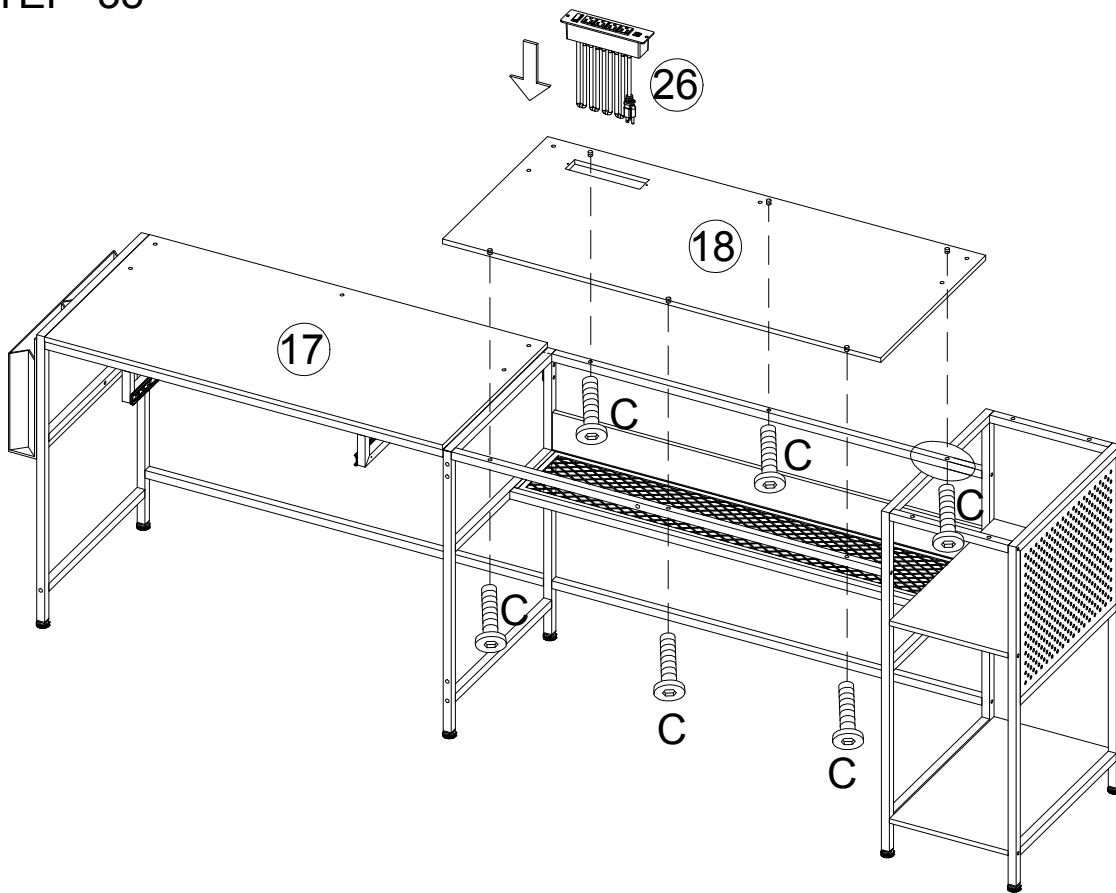

C M6*25
X6


STEP 39

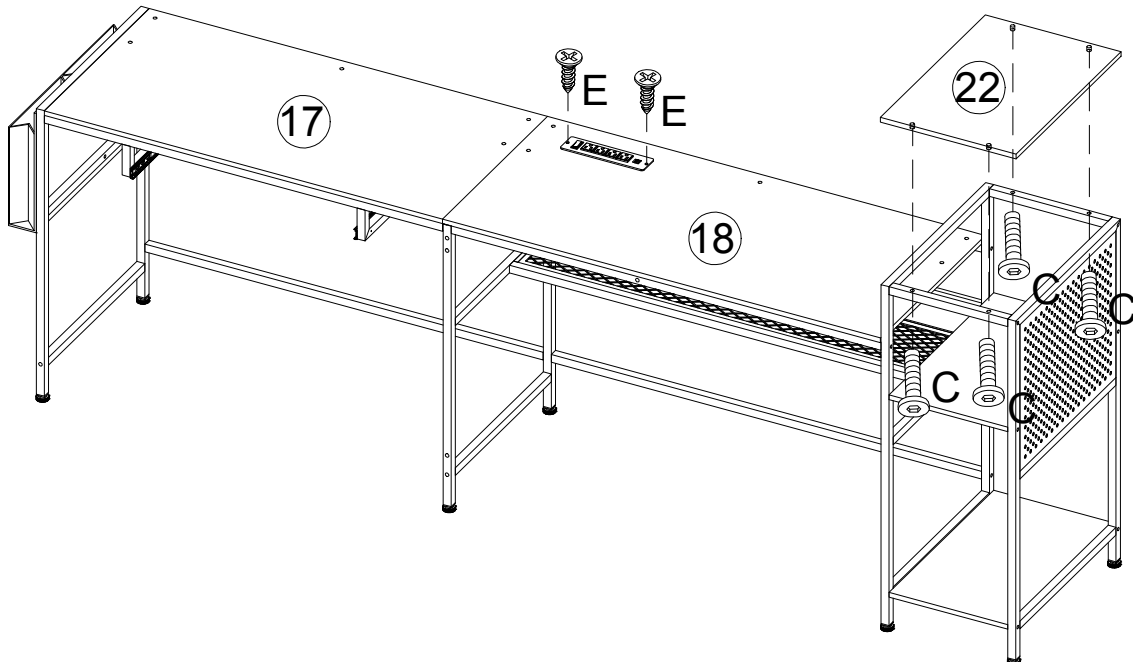


C M6*25
X4
E ST3.5*12
X2

ASSEMBLY INSTRUCTION

STEP 40

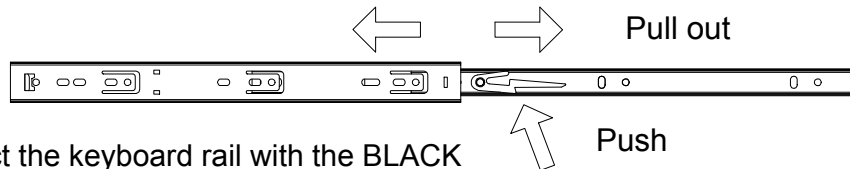


Disconnect the keyboard rail with the BLACK PLASTIC PART. It needs to be pulled down to disconnect the runners.

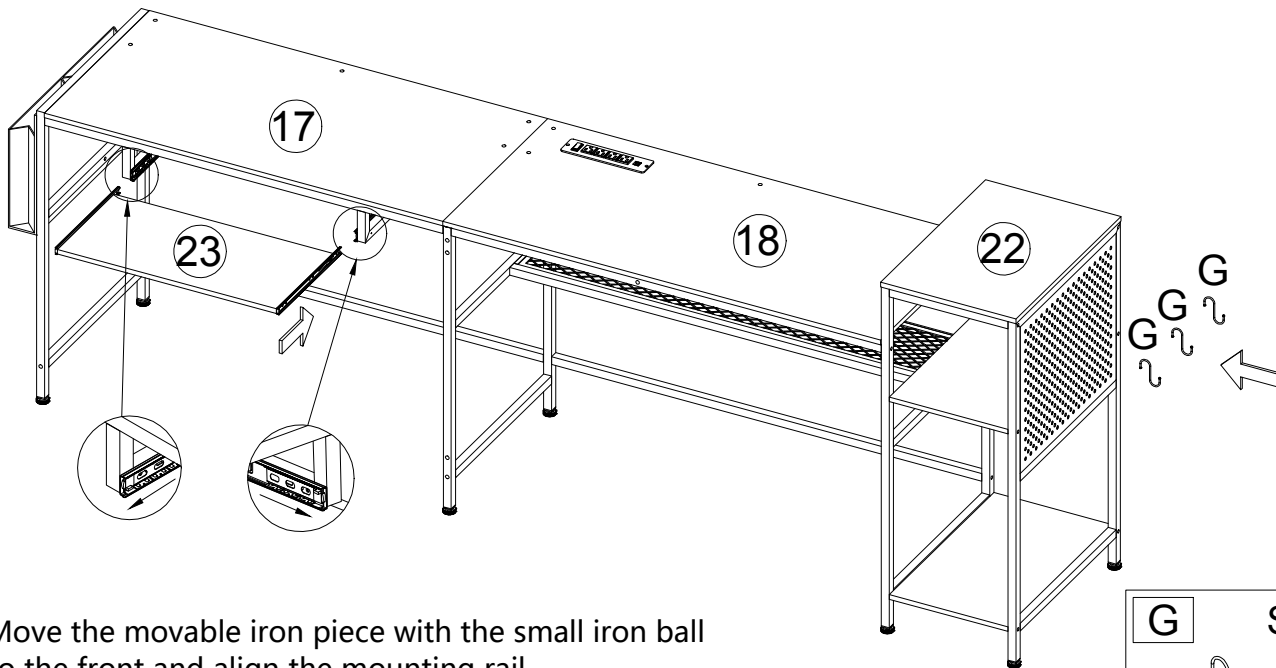

Move the movable iron piece with the small iron ball to the front and align the mounting rail.


STEP 41

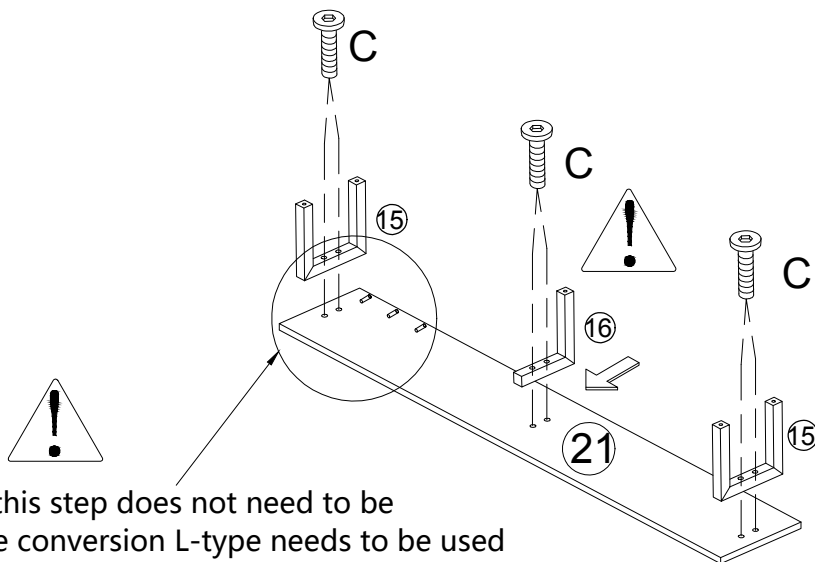

Side hole this step does not need to be used in the conversion L-type needs to be used




Note the direction of Iron Piece No. 16

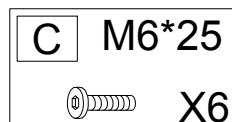

ASSEMBLY INSTRUCTION

STEP 42

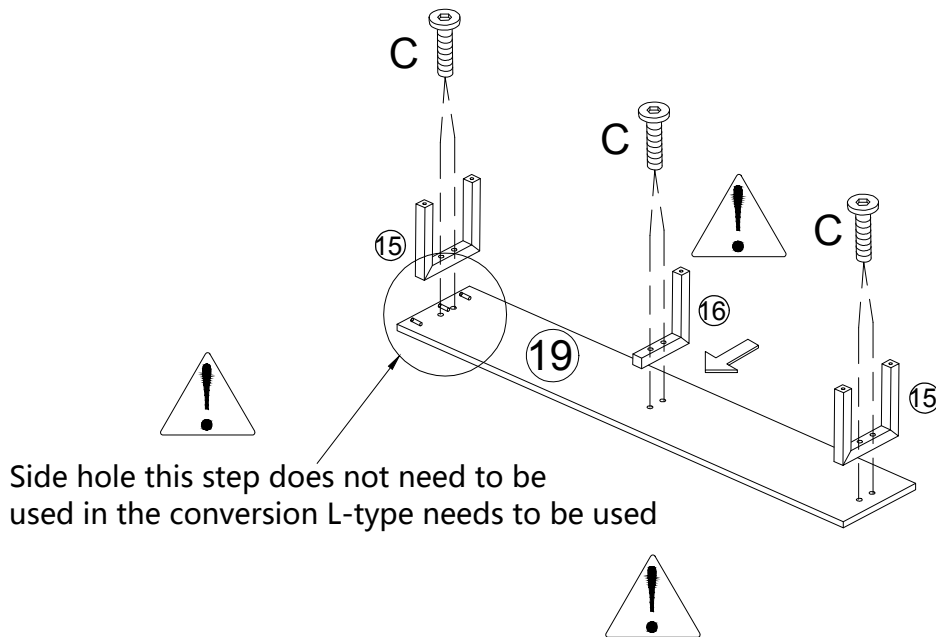


Side hole this step does not need to be used in the conversion L-type needs to be used


Note the direction of Iron Piece No. 16

C	M6*25
	X6

STEP 43

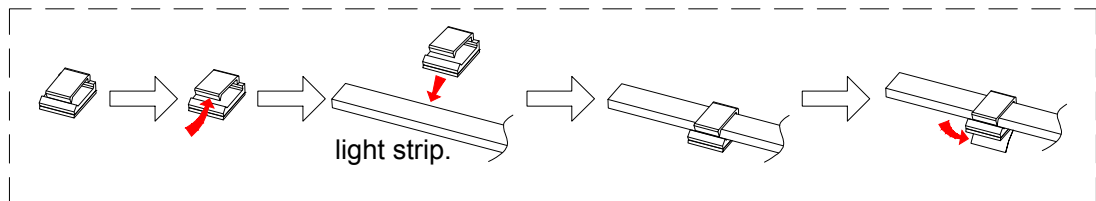

The light strip can be pasted to the desired position according to your own needs.

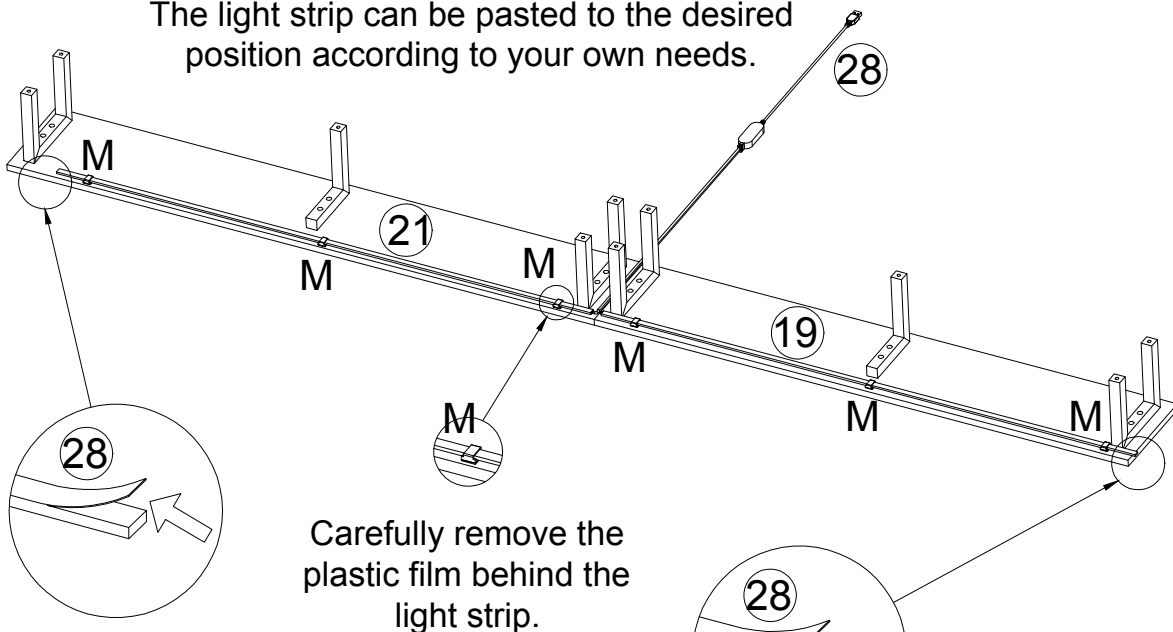


Carefully remove the plastic film behind the light strip.

Note that M can be installed or not according to personal needs. M is used for the stick-off configuration of the light strip.

M	
	X6


ASSEMBLY INSTRUCTION

STEP 44

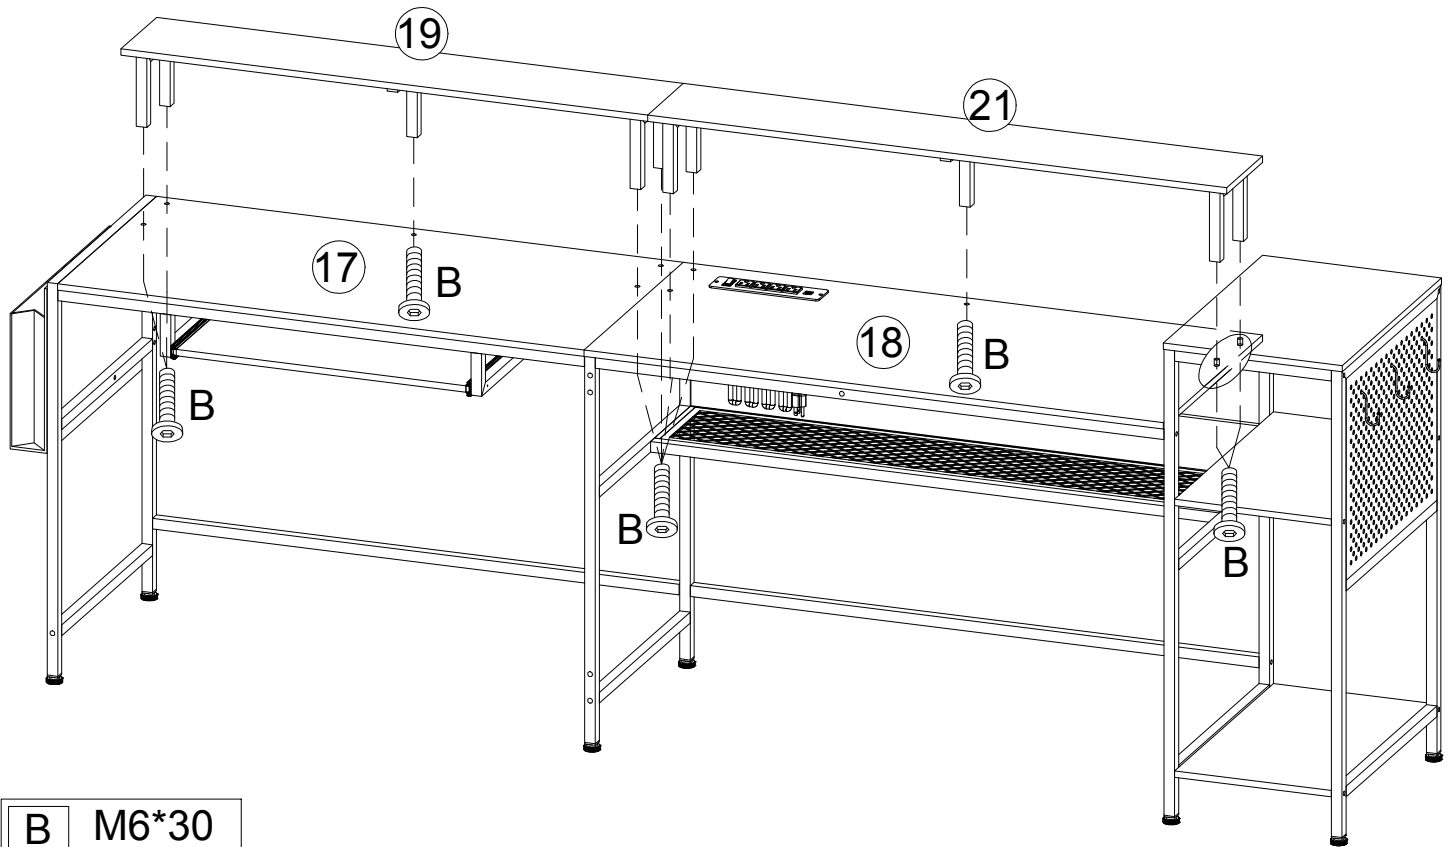


B M6*30
X10

STEP 45

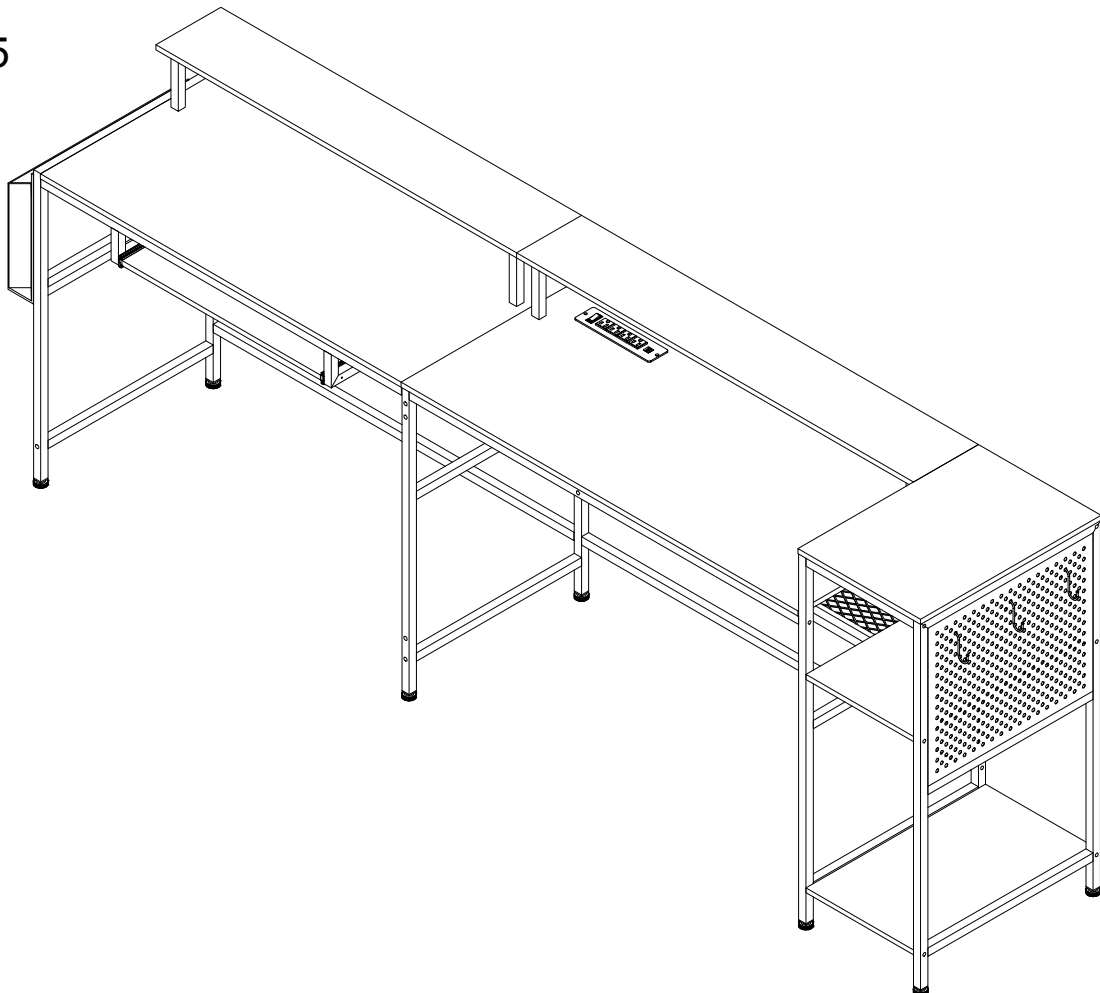


ASSEMBLY INSTRUCTION

STEP 46

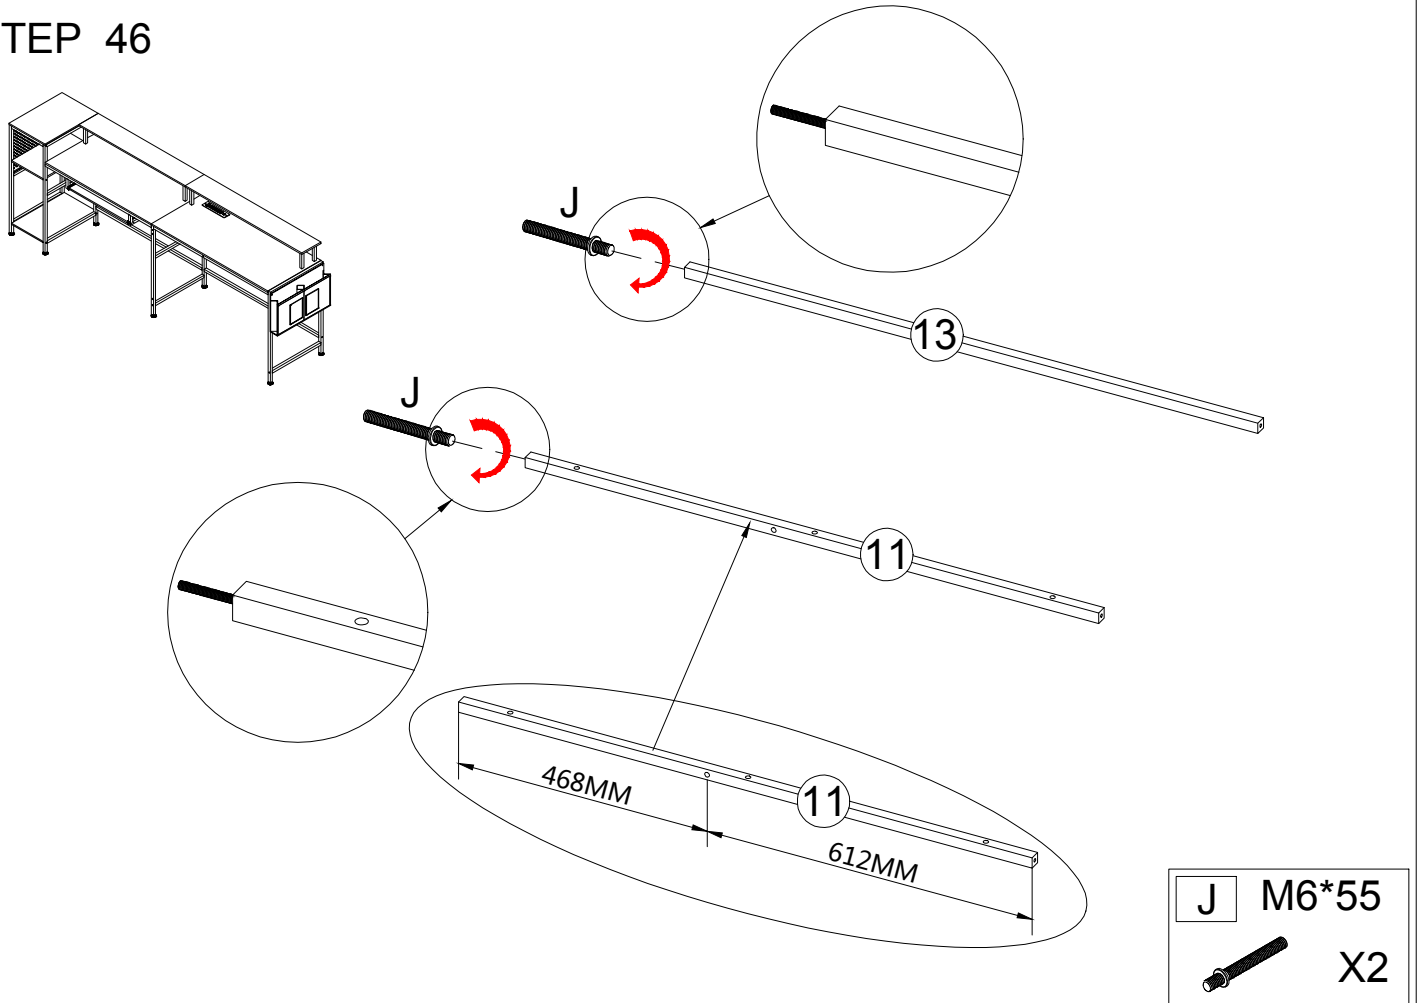


STEP 47

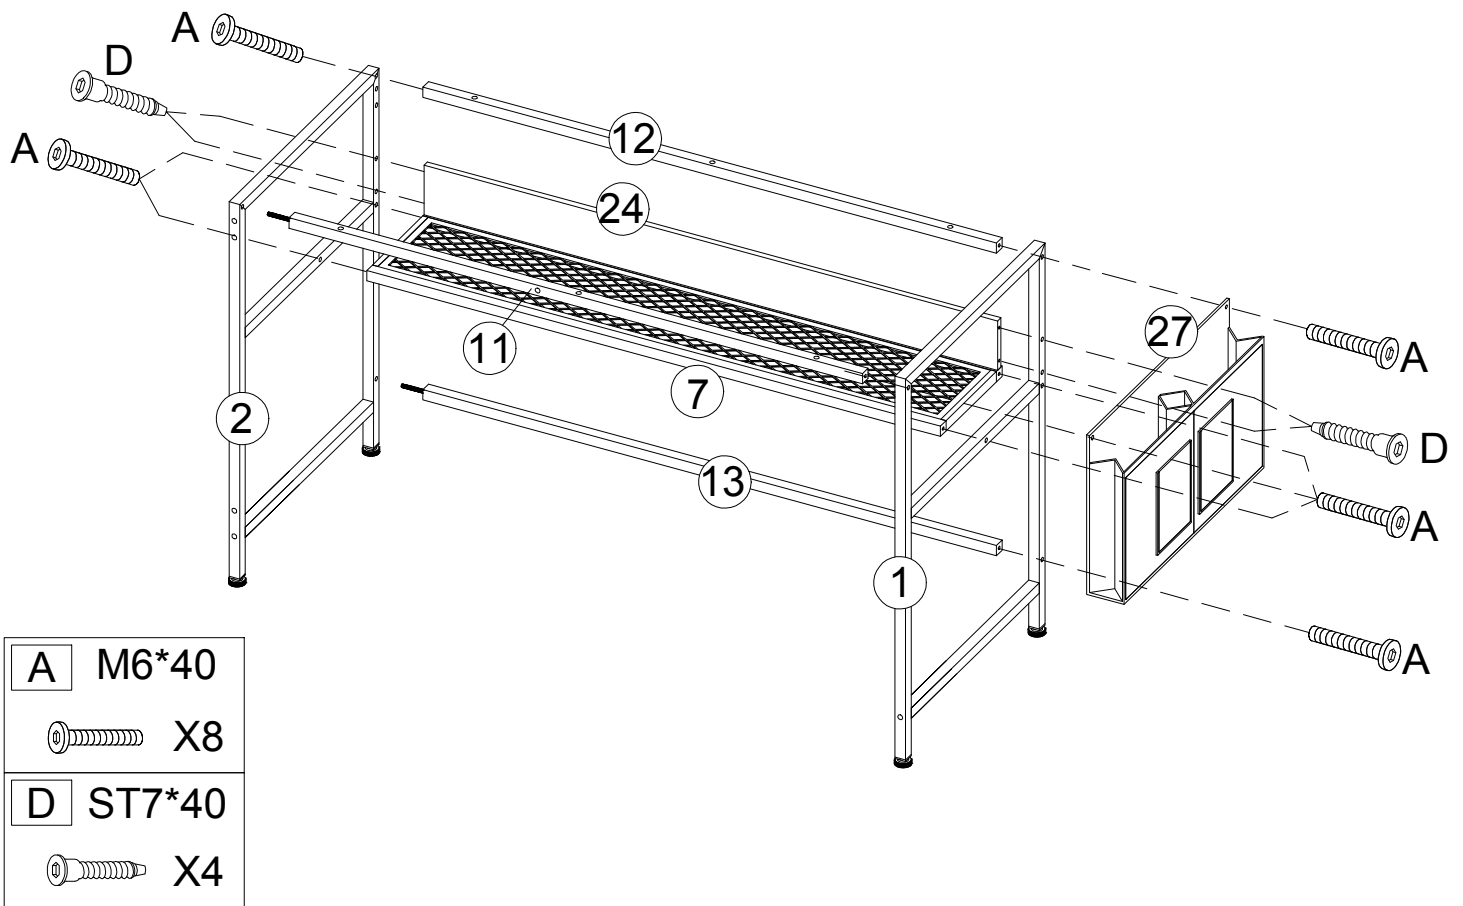

ASSEMBLY INSTRUCTION


STEP 48

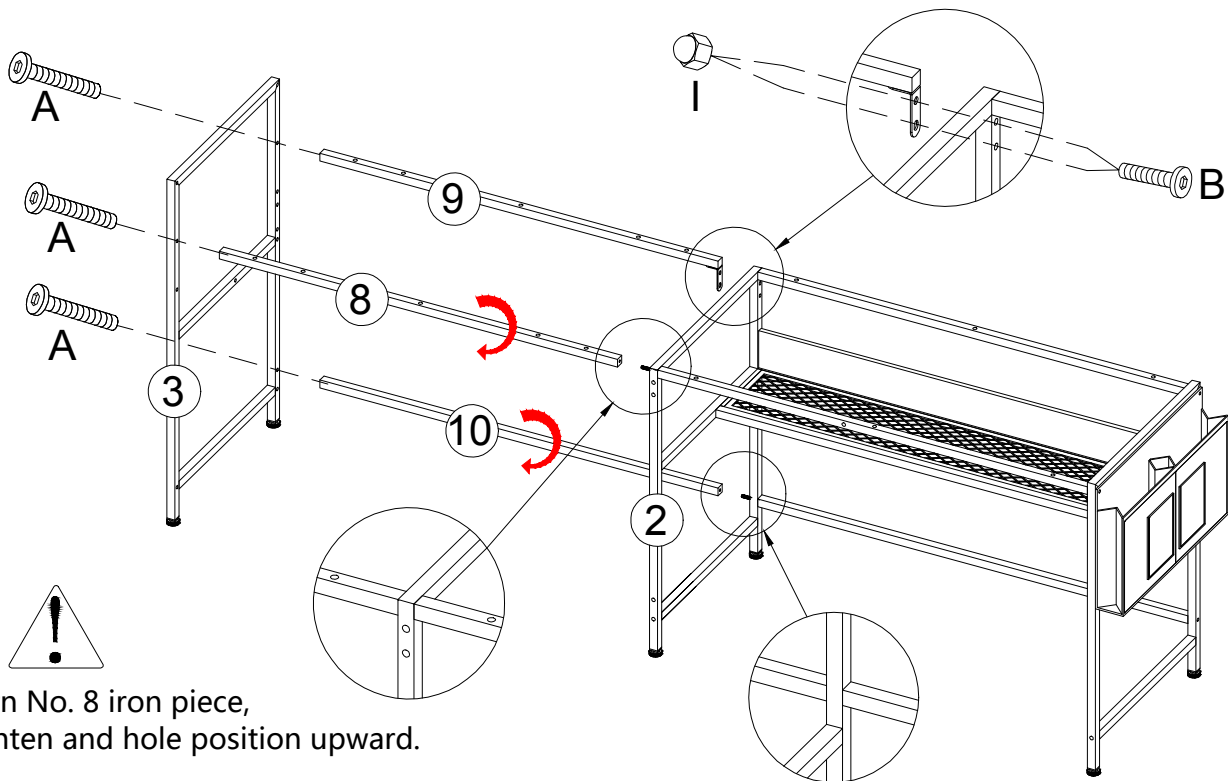

Turn No. 8 iron piece,
tighten and hole position upward.

A M6*40	B M6*30	I M6*12
X3	X2	X2


STEP 49

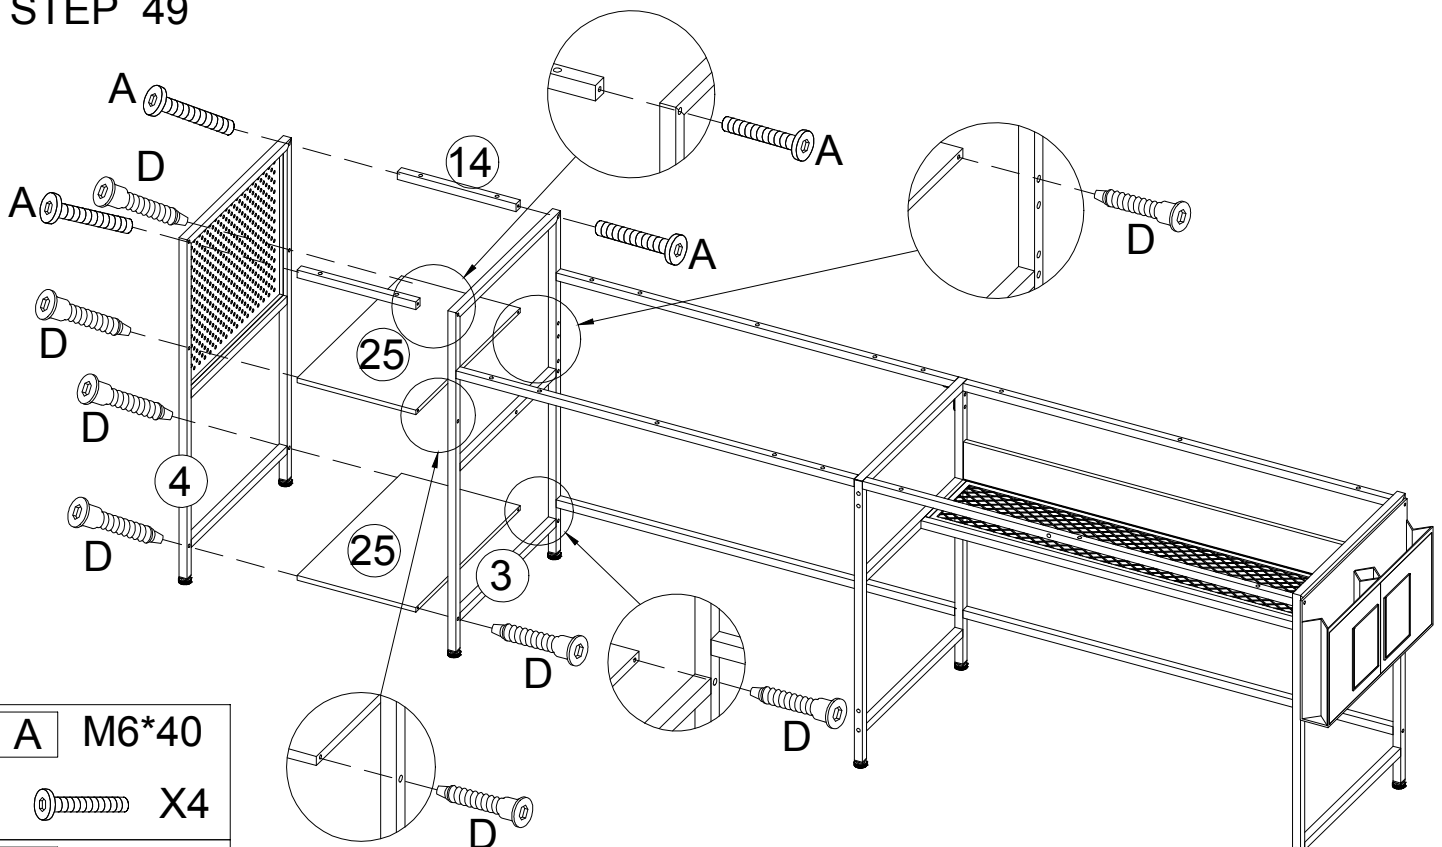

A M6*40
X4
D ST7*40mm
X8

ASSEMBLY INSTRUCTION


STEP 50

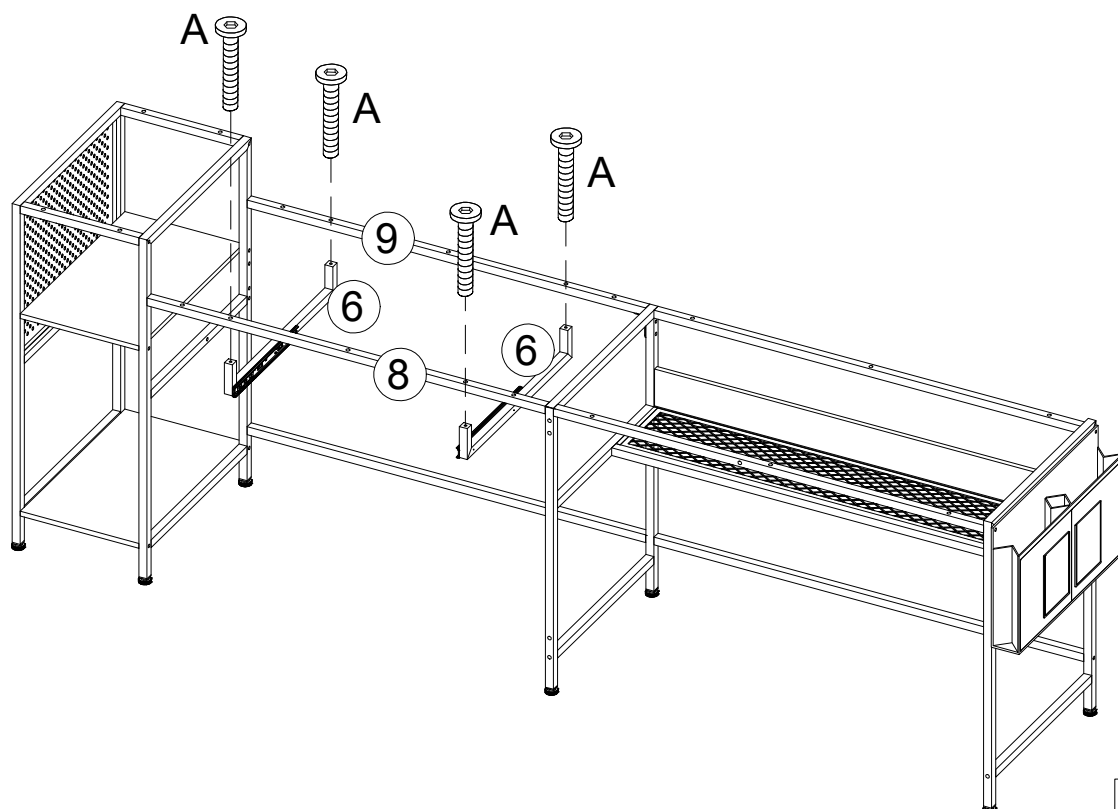

A M6*40

X4

STEP 51

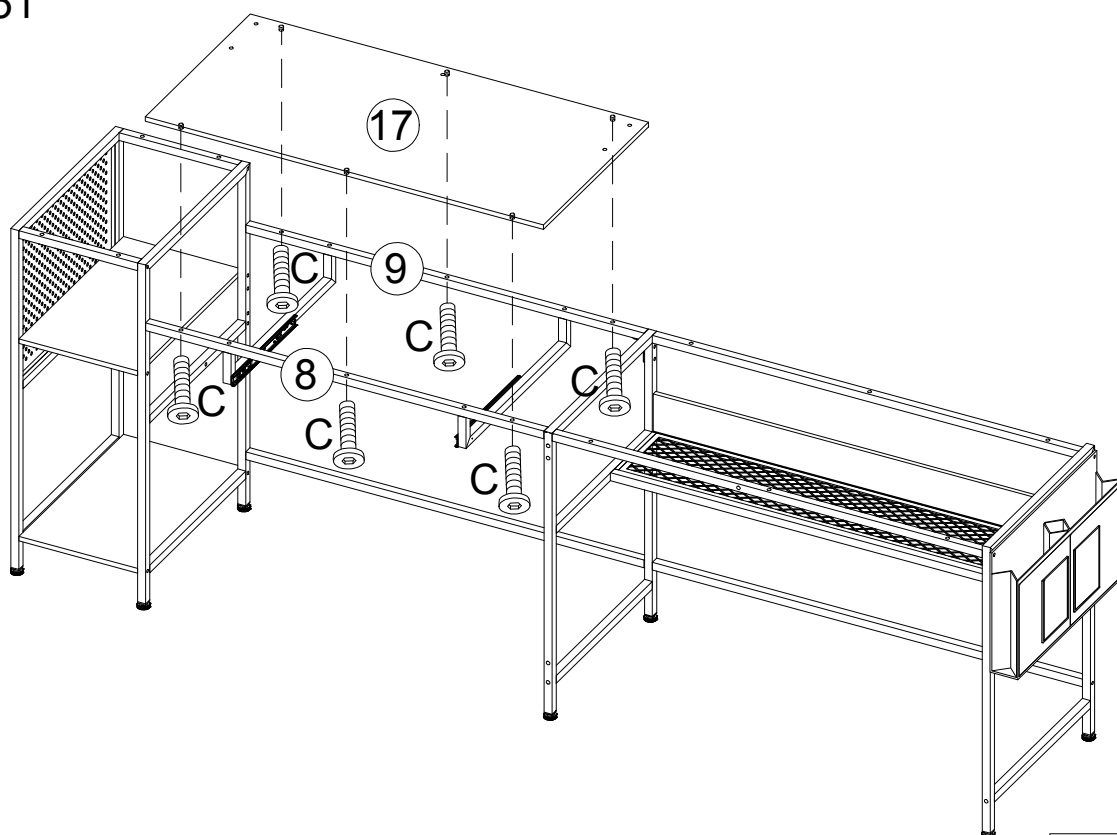


C M6*25

X6


ASSEMBLY INSTRUCTION

STEP 52

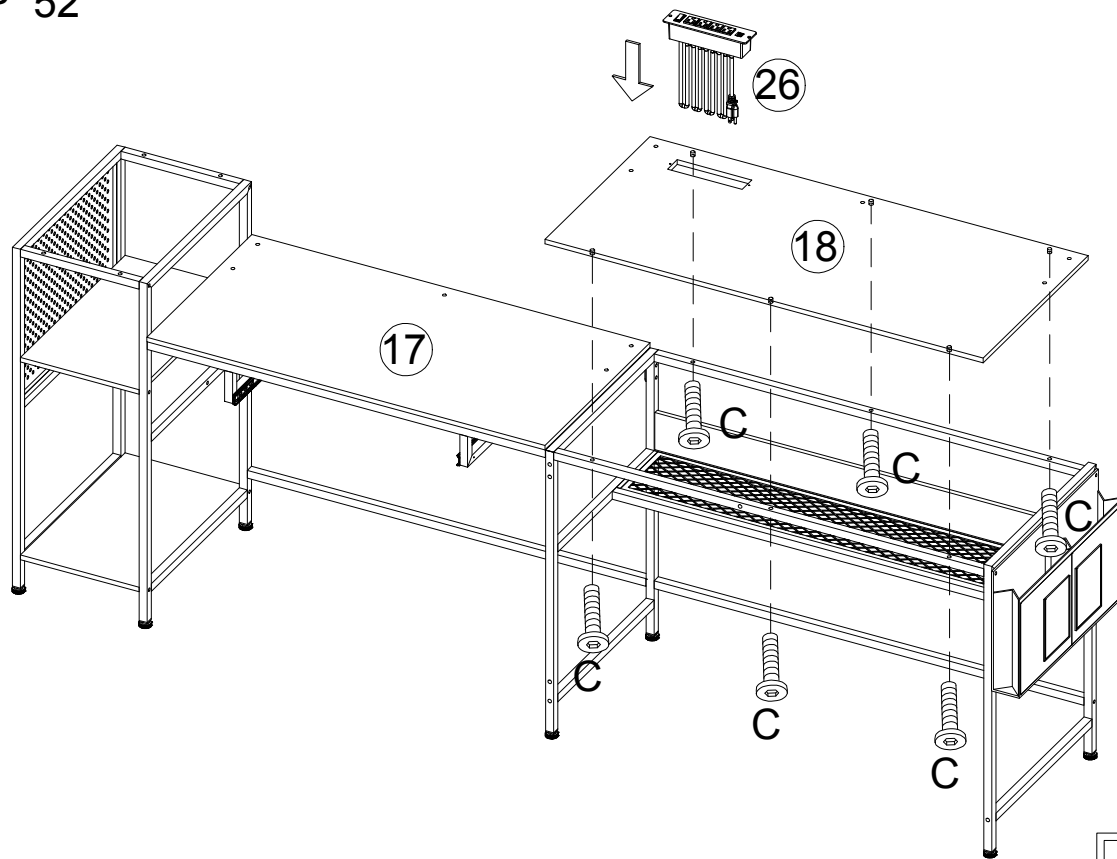

C M6*25
X6


STEP 53

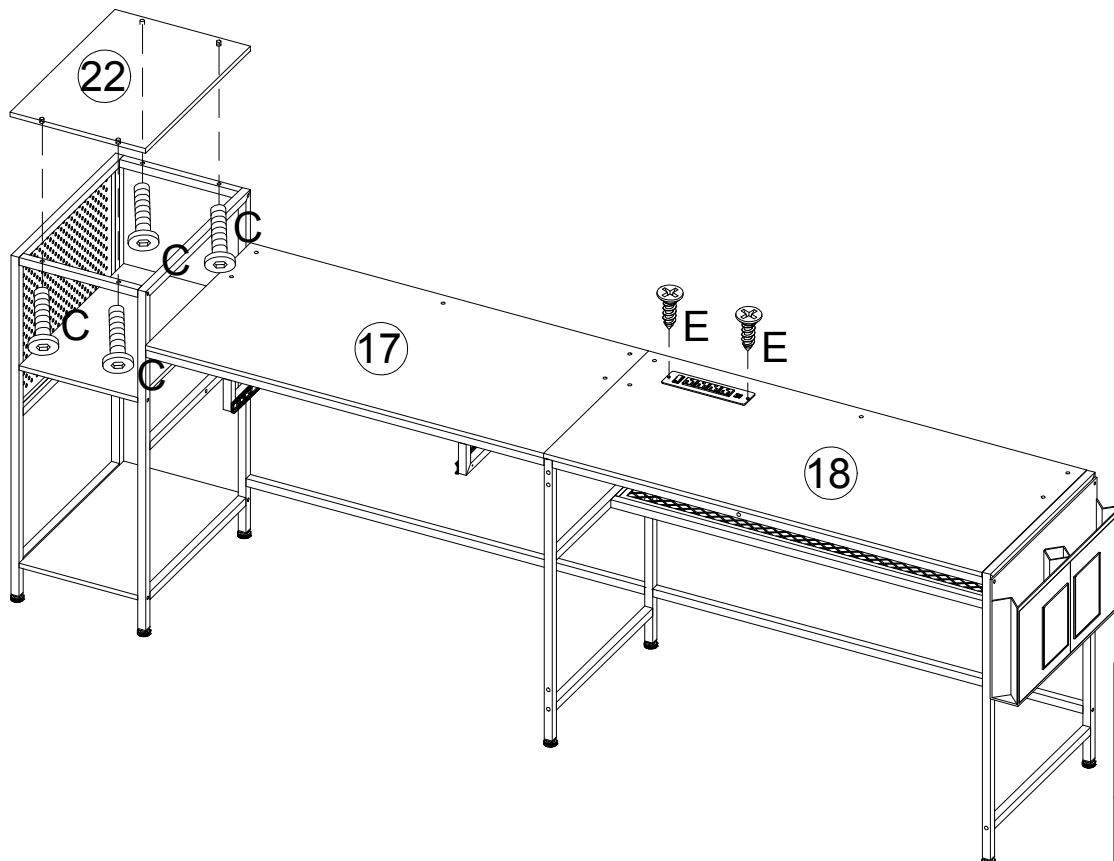


C M6*25
X4
E ST3.5*12
X2

ASSEMBLY INSTRUCTION

STEP 54

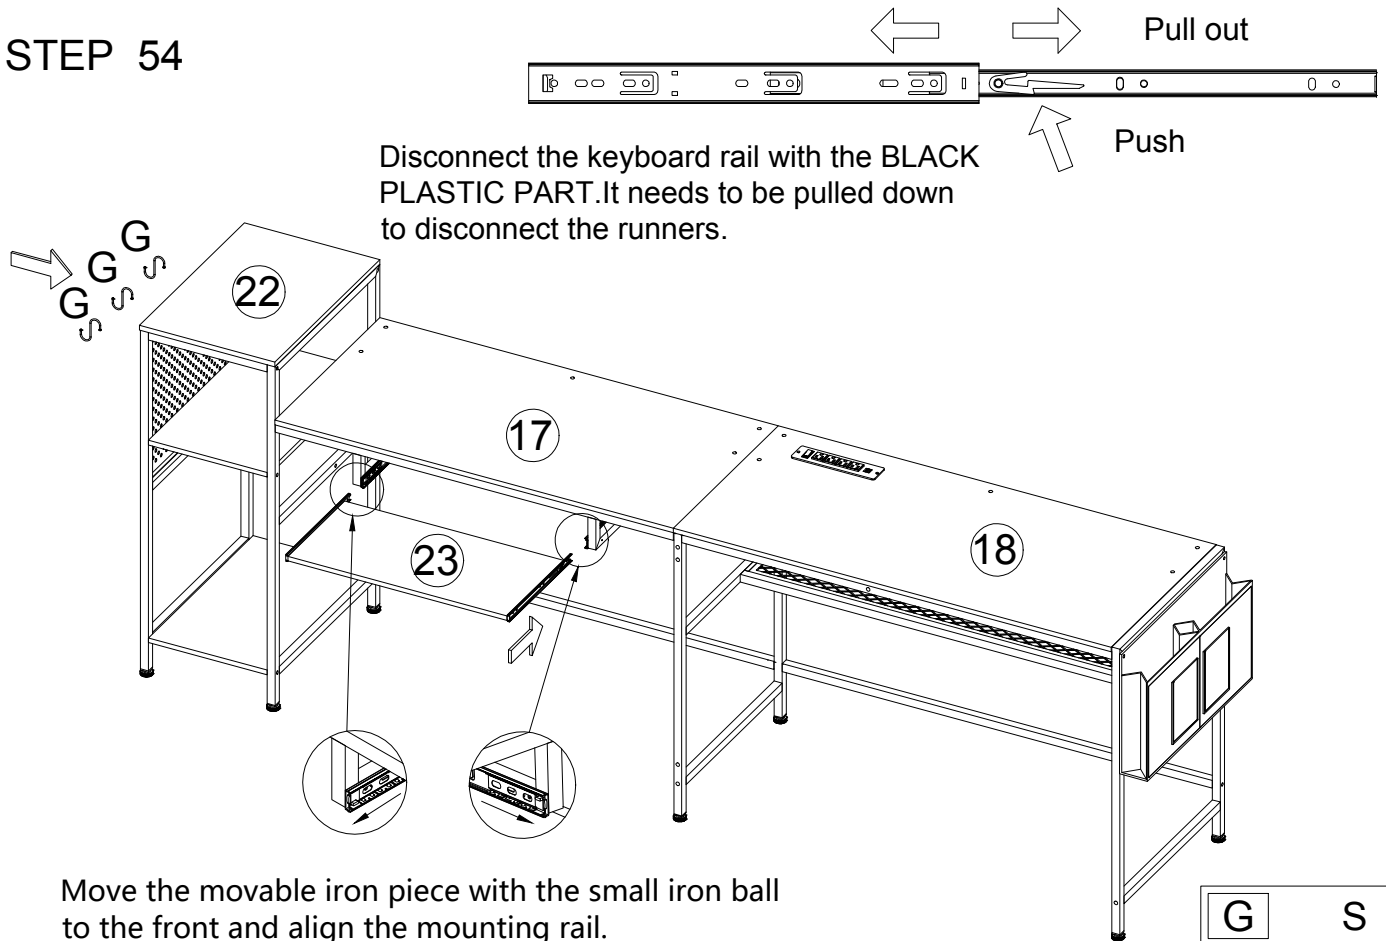



STEP 55

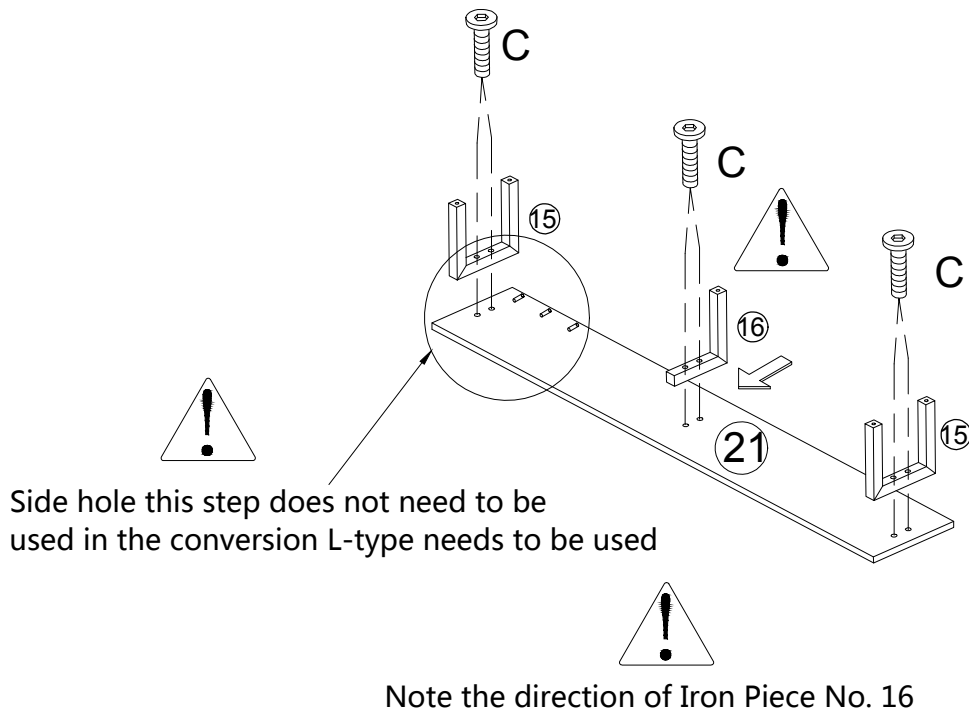


ASSEMBLY INSTRUCTION

STEP 56

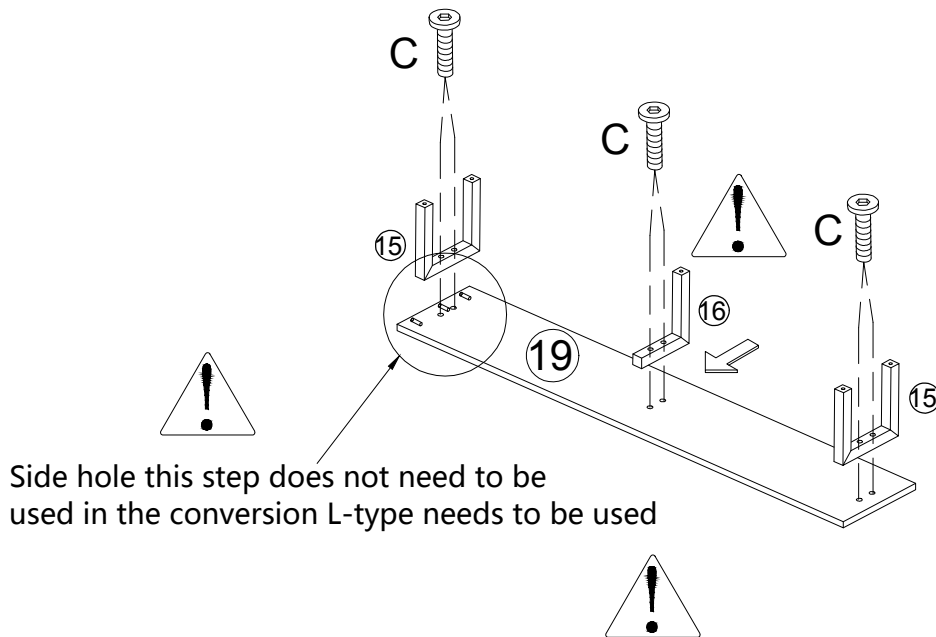



C	M6*25
	X6

STEP 57

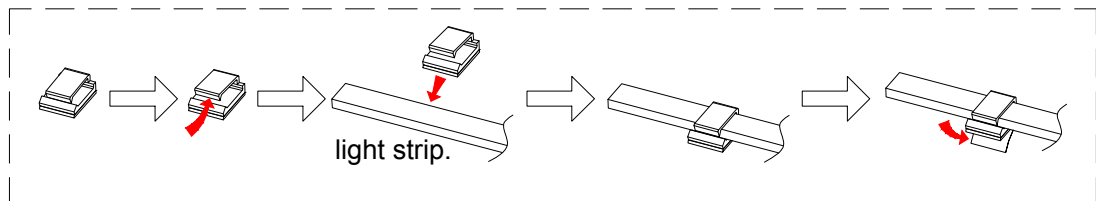


The light strip can be pasted to the desired position according to your own needs.

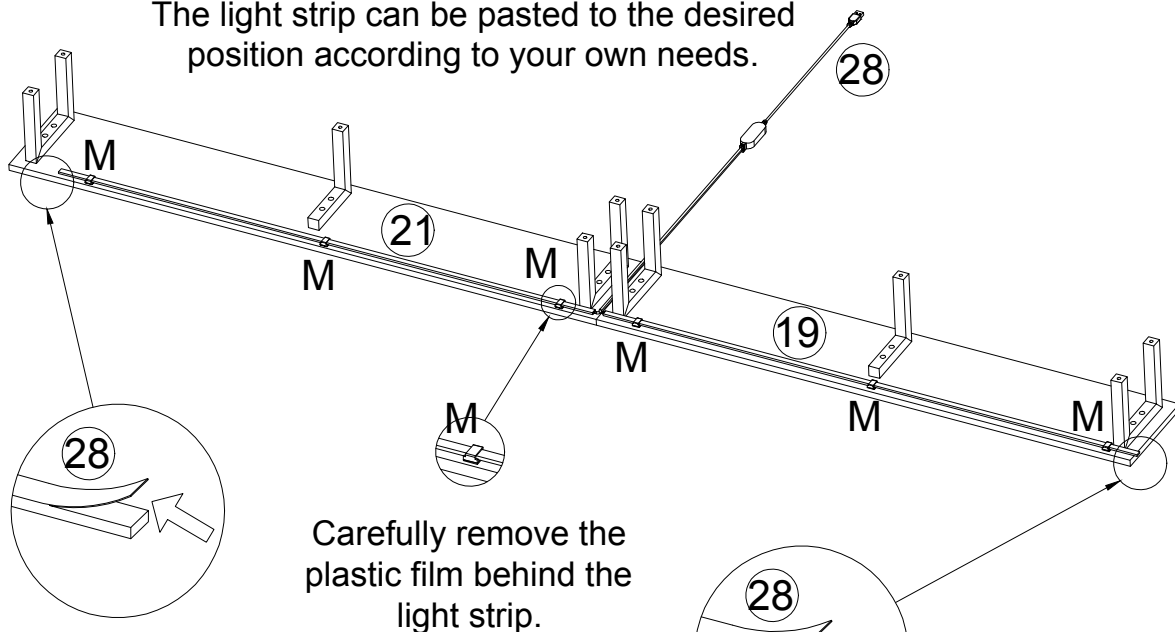


M	X6
	

ASSEMBLY INSTRUCTION

STEP 58

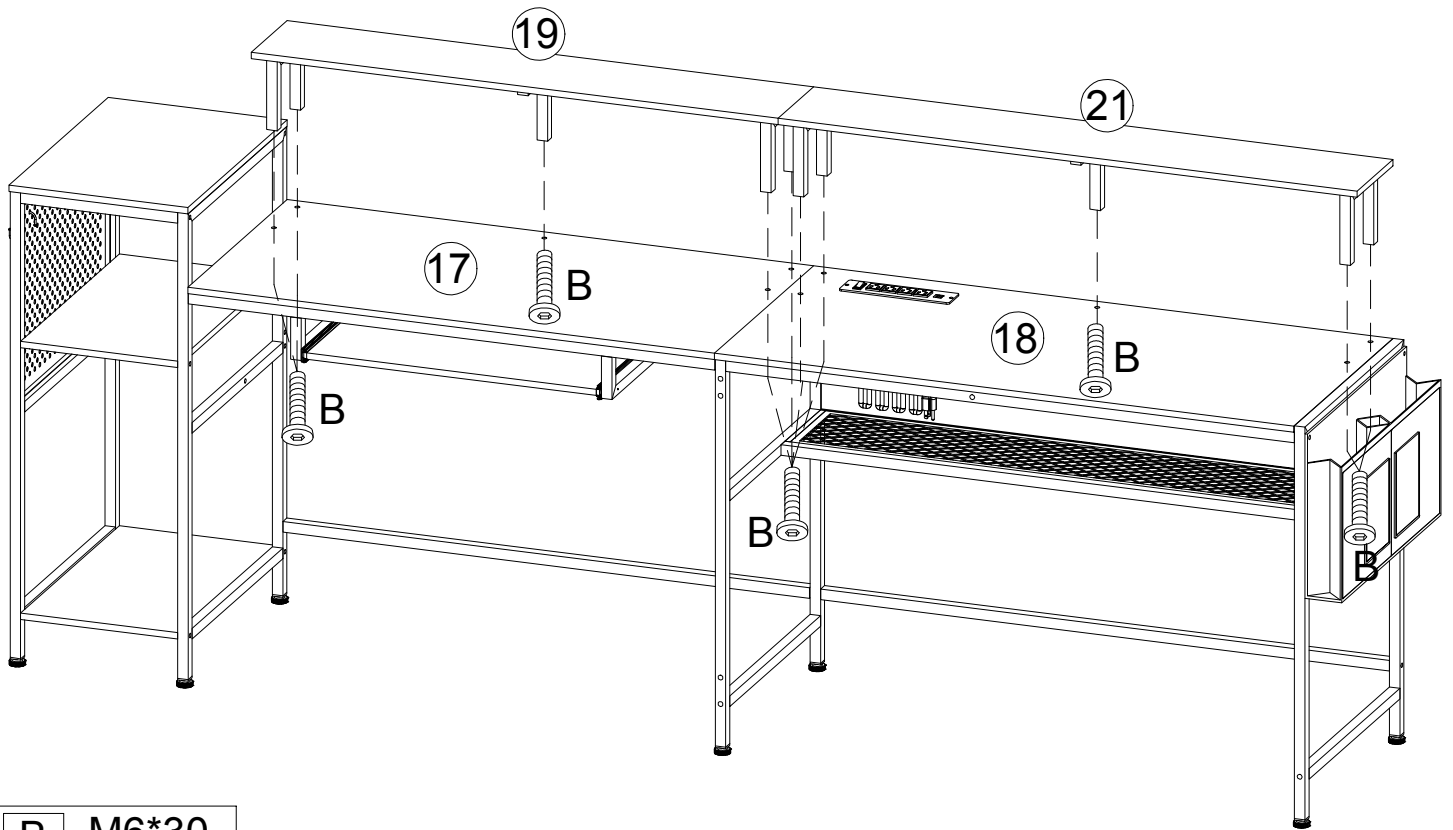

B M6*30

 X10

STEP 59

